


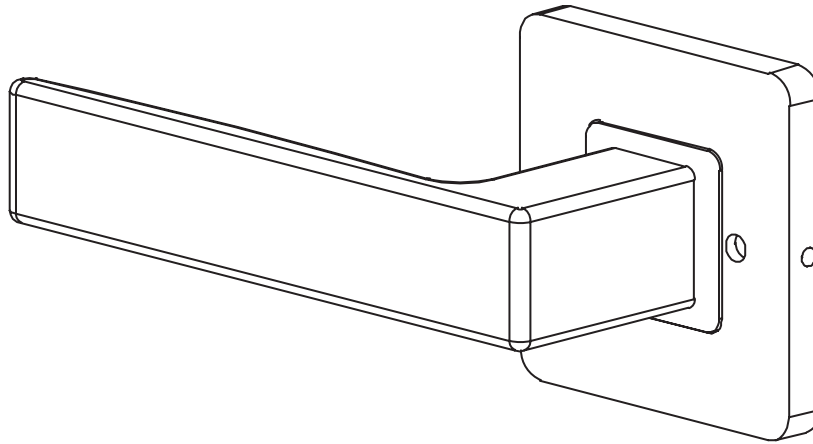


Warning!



Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.


TOOLS REQUIRED & LAYOUT

Installation is the same regardless of handle model shown

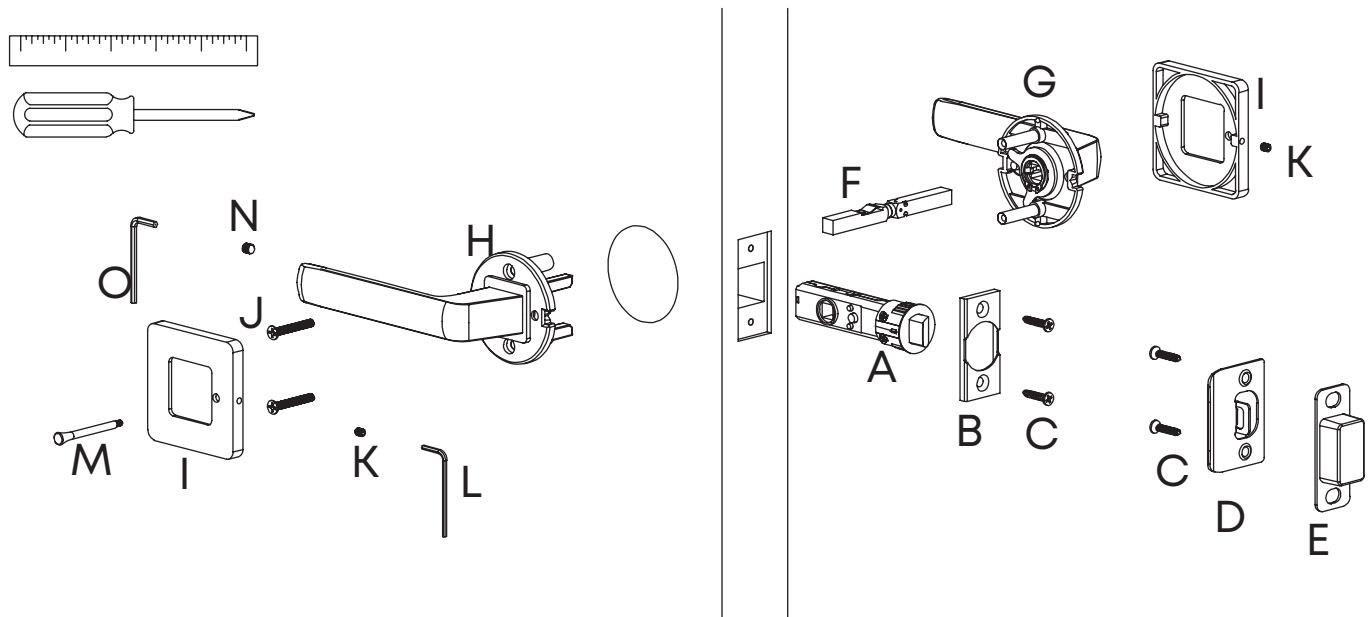

STEP 1 - Prepare door and check dimensions

If drilling a new door use the supplied template.
See below for with or without face plate.

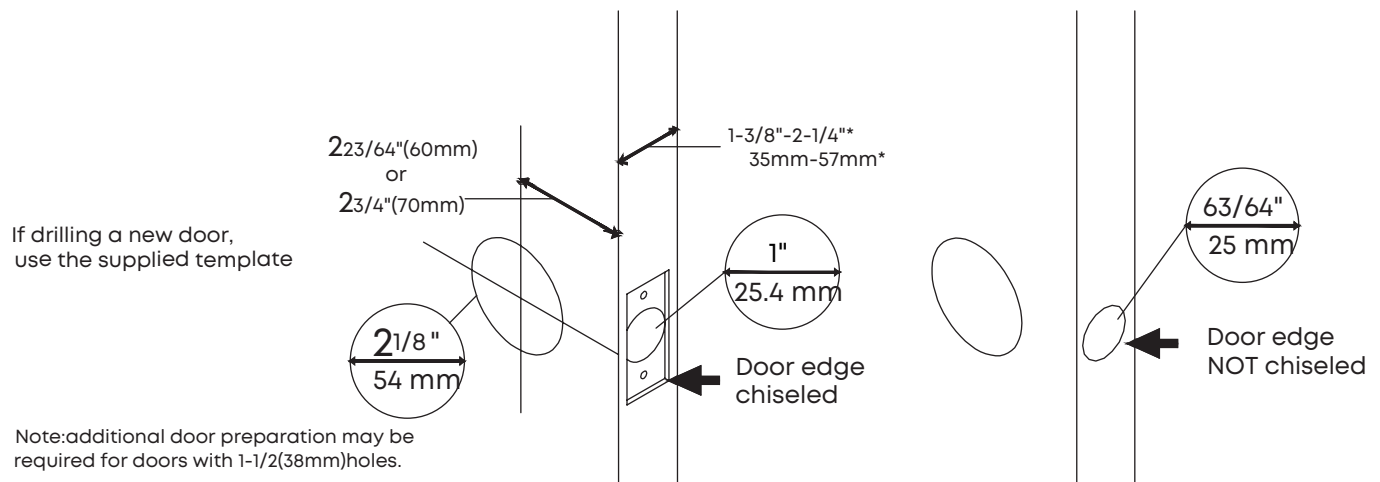


STEP 2 - Install latch (with or without faceplate)


Adjust latch by removing set screws and rotating latch before installation.

Adjust Latch "A" / "J"
(if needed)


2 23/64" (60mm)
or
2 3/4" (70mm)

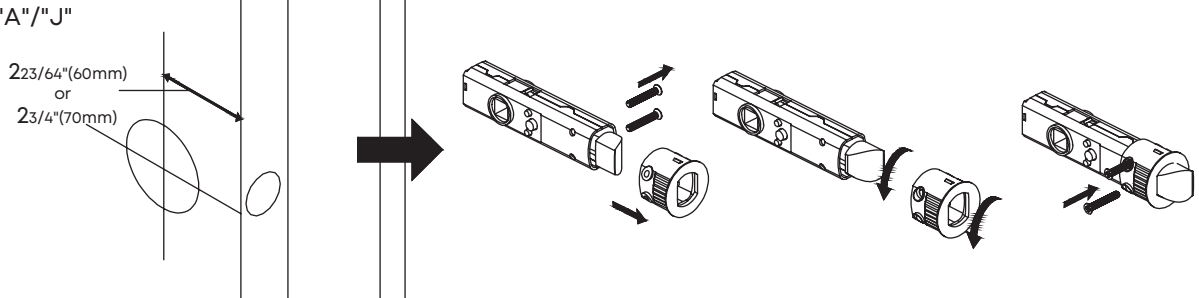

WITH FACEPLATE

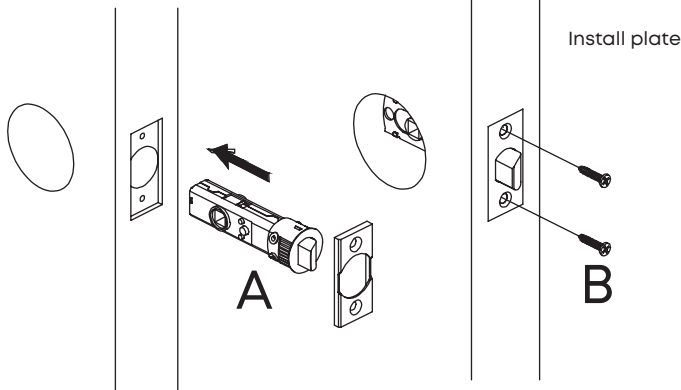


WITHOUT FACEPLATE

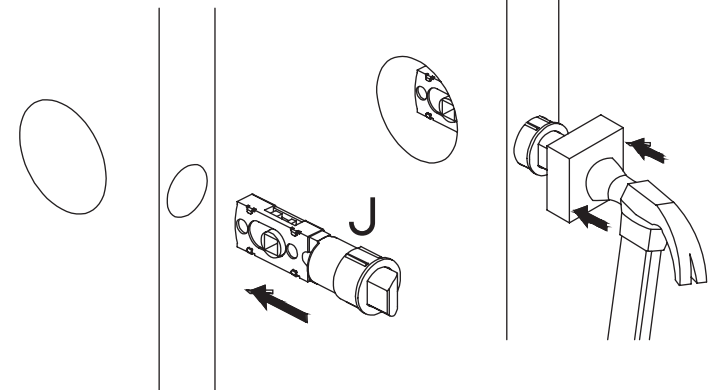


STEP 3 - Install strike plate

Use screws (B) to install the strike plate.

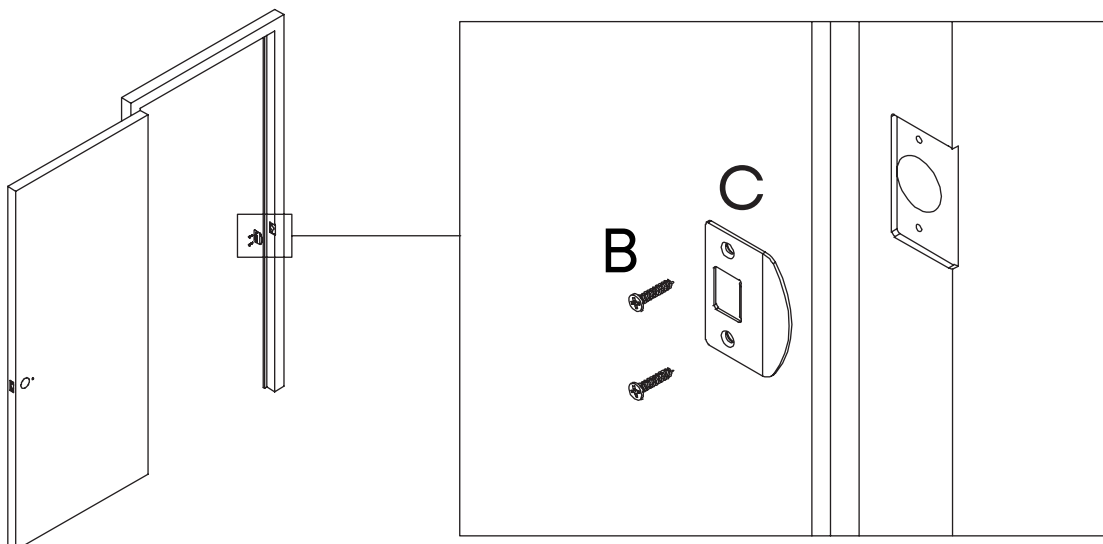


STEP 4 - Install exterior lock assembly

Insert the square spindle and posts through the latch.

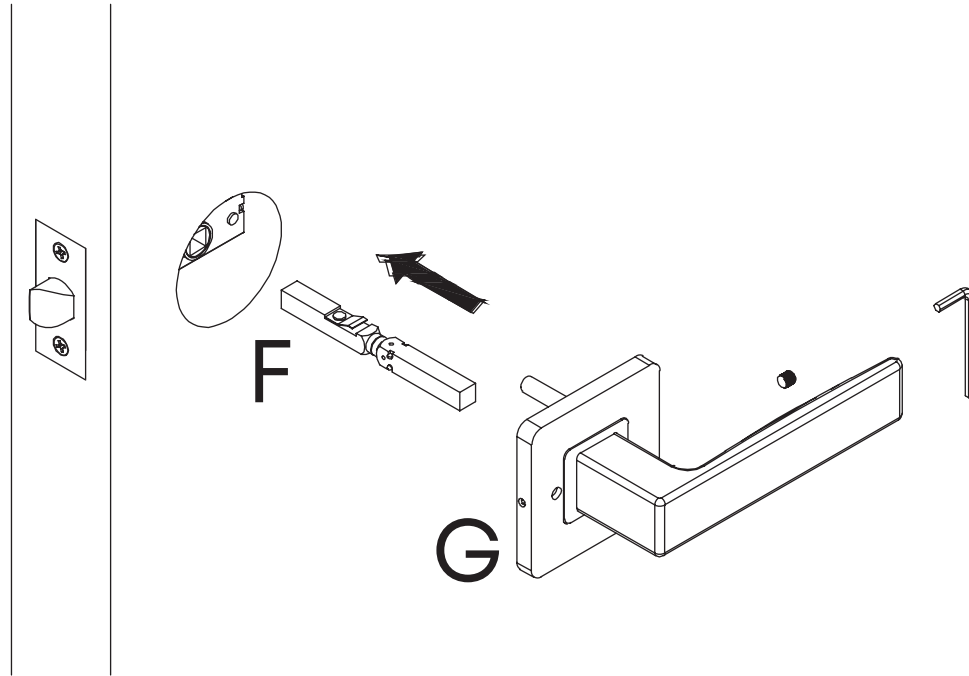


STEP 5 - Install interior lock assembly

Attach the interior lock assembly to the exterior assembly using the mounting screws.

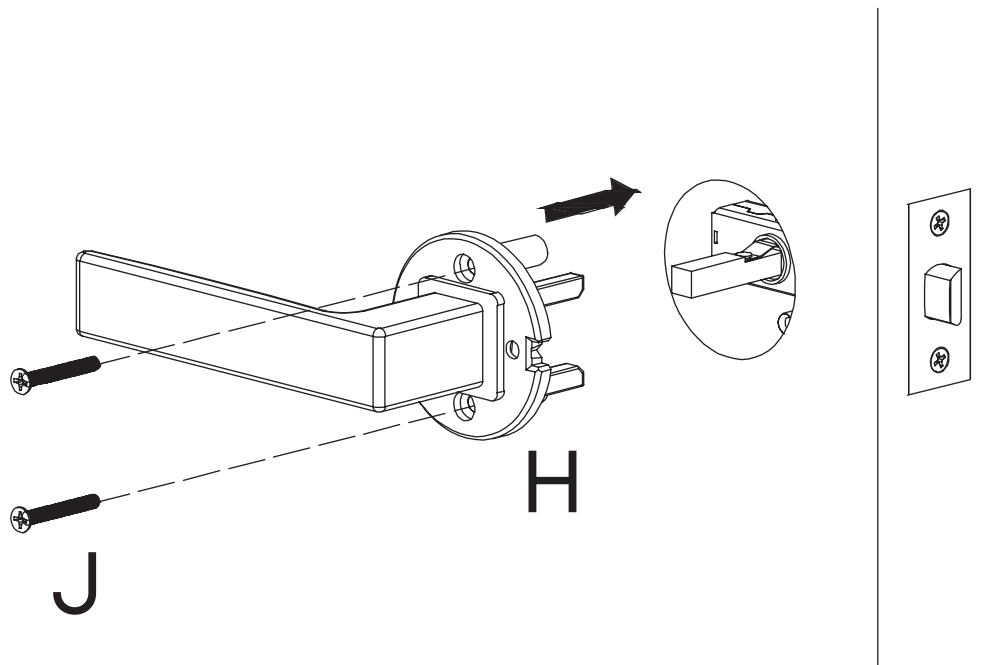


STEP 6 - Install the face plate onto the interior assembly

Slide the face plate onto the assembly.

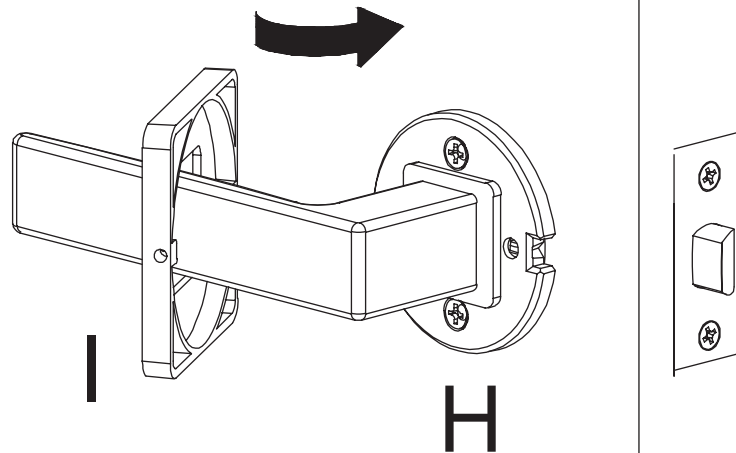


STEP 7 - Install the set screw onto the interior assembly

Use the included allen key (L).

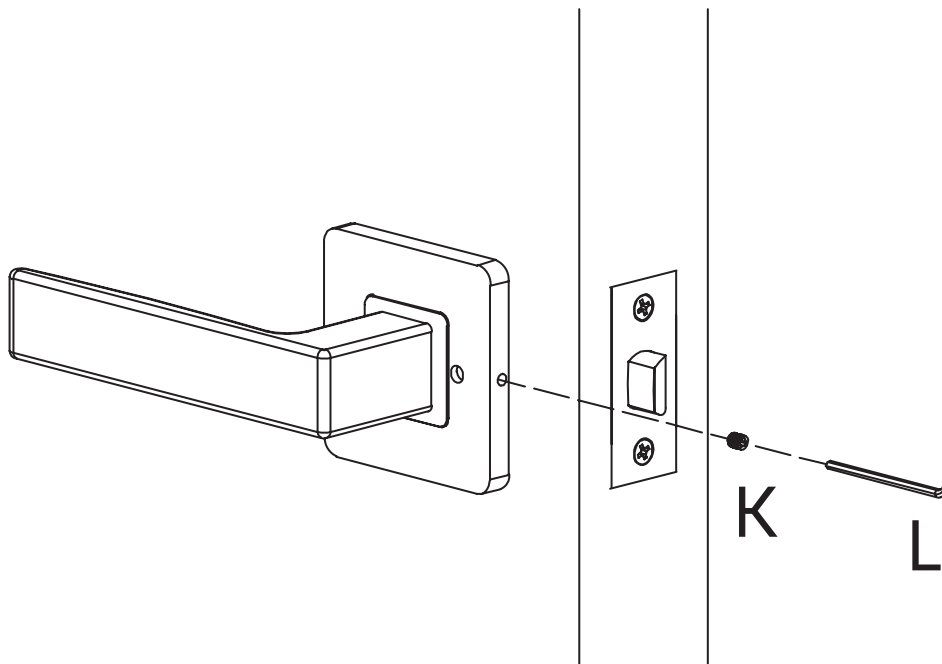


STEP 8 - Insert privacy pin.

Insert the privacy pin into privacy rose. Turn the pin clockwise to tighten.

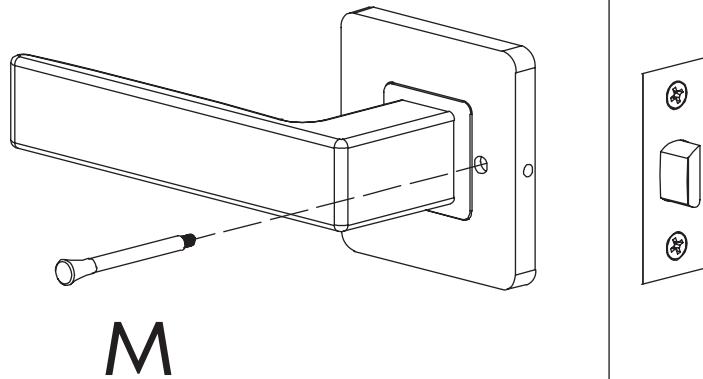


STEP 9 - Tighten the exterior handle

Use the included allen key (O).

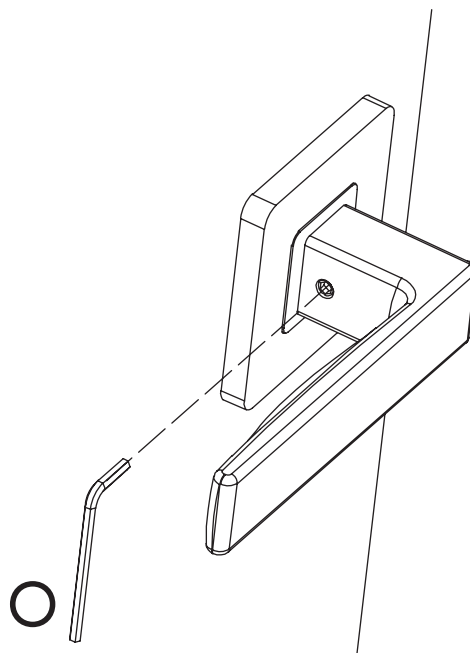

PRIVACY LEVERS ONLY

Your lock assembly comes with an emergency unlock tool.

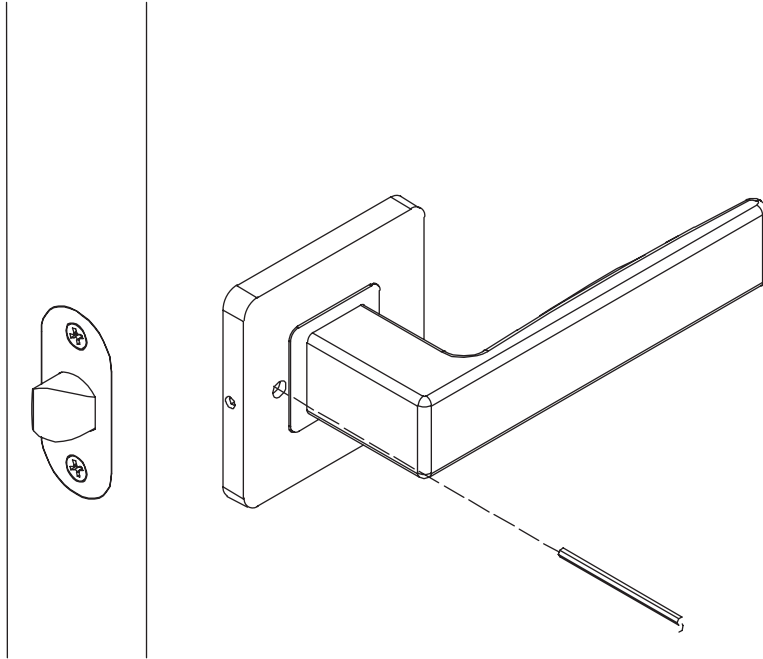

SUPPLIED DRILL TEMPLATE

