
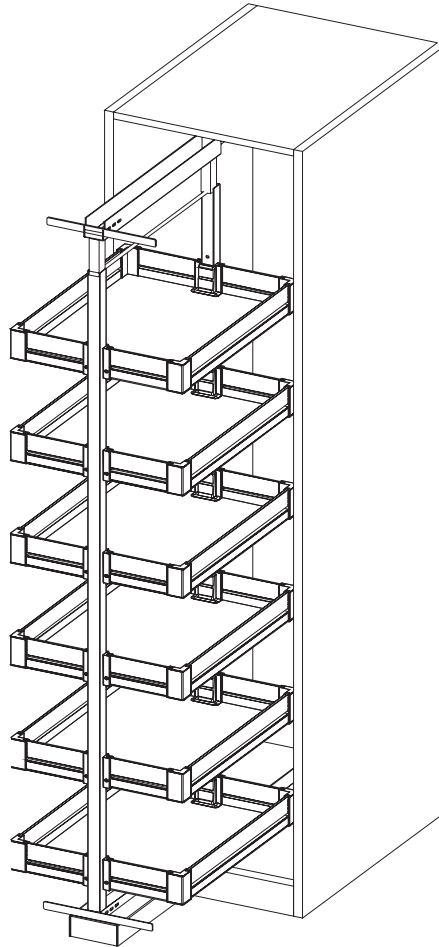


**Warning!**

Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.


**MAXIMIZE SPACE,
MINIMIZE EFFORT.**

LIST OF PARTS		
No.	Quantity	Description
A	1 set	Basket
B	1 set	Upper slide
C	1 pc	Bottom slide
D	2 pcs	Door panel connector
E	2 pcs	T-type door panel connector
F	2 pcs	Socket set screw
G	30 pcs	ST4X20 screw
H	6 pcs	M6X12 screw
I	1 set	Main frame
J	1 set	Layer hook
K	1 pcs	Paper card
L	3 pcs	M6X30 screw
M	1 pcs	Allen key

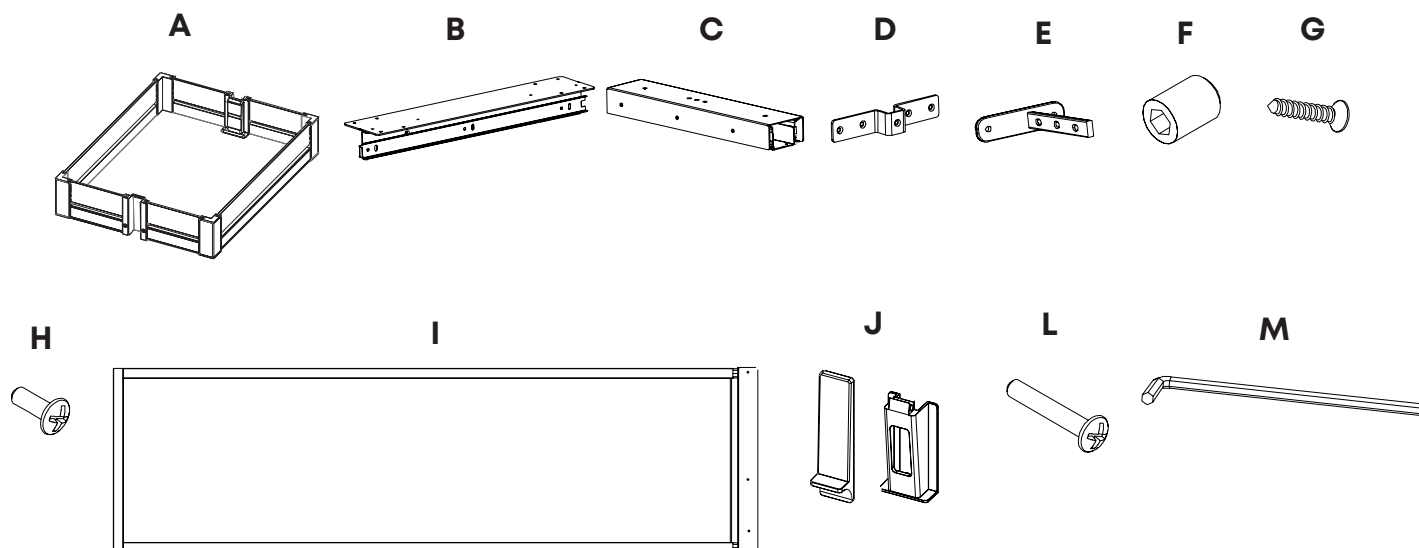


Product Specifications

Product depth W340, D470, H1984-1684 as in form.

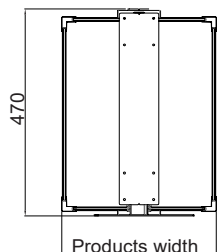


Cabinet sizes	Products width
400	350

Product layers	Products heights
6-layer	1984-1684

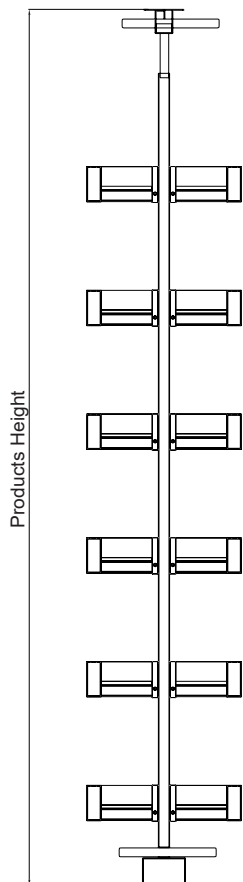


Cabinet requirements:

Cabinet inner Depth (D) ≥ 480 , inner height (H), inner width(W) as in form.

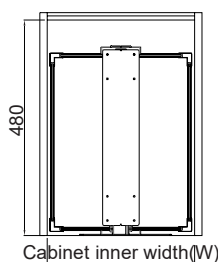

Cabinet sizes	Cabinet inner width (W)
400	364

Product layers	Cabinet inner width (W)
6-layer	1984-1684

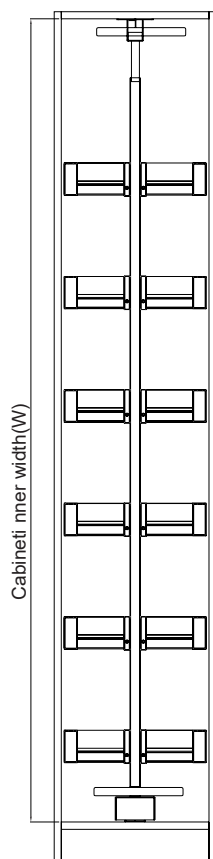

STEP 1 - Install the bottom slide

1. Draw the centre line, shown in Figure 1.
2. Align the bottom slide (C) to the centre line and secure with ST4X20 screws (G), shown in Figure 2. (The illustration is from top to bottom)

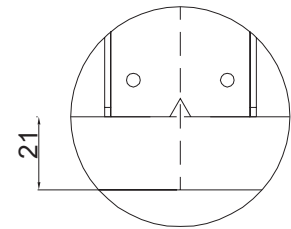
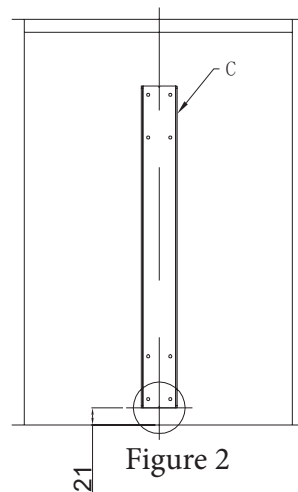
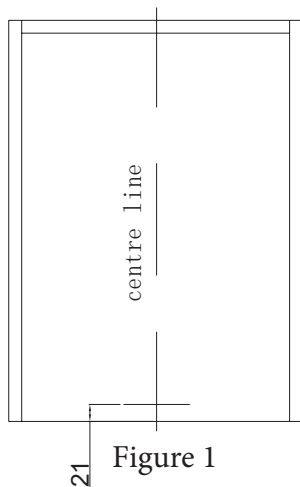


Figure 3

unit = mm

STEP 2 - Install the upper slide

1. Remove the upper slide (B) from main frame.
2. Draw the centre line, shown in Figure 1.
3. Align the upper slide (B) to the centre line and secure with ST4X20 screws (G), shown in Figure 2. (The illustration is from bottom to top)

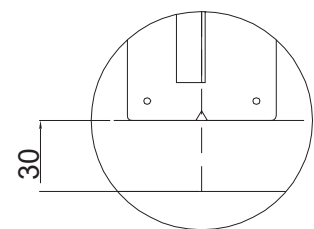
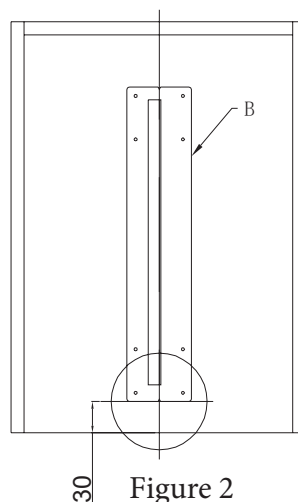
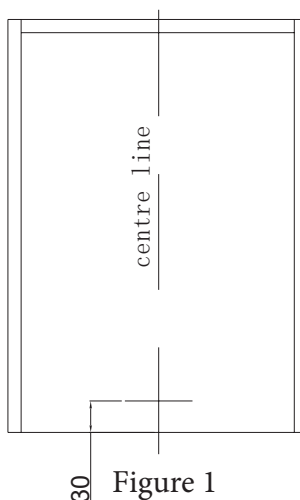


Figure 3

unit = mm

STEP 3 - Install the main frame

1. Assemble the main frame.
2. Install the upper slide (B) into the main frame (I), as shown in Figure 2.
3. Fix the main frame to the bottom slide (C), as shown in Figure 3.
4. Lock the main frame with socket set screw (F), to fasten the adjusting frame, as shown in Figure 4.

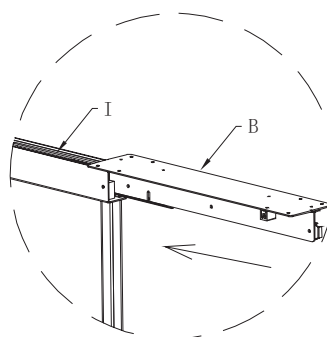
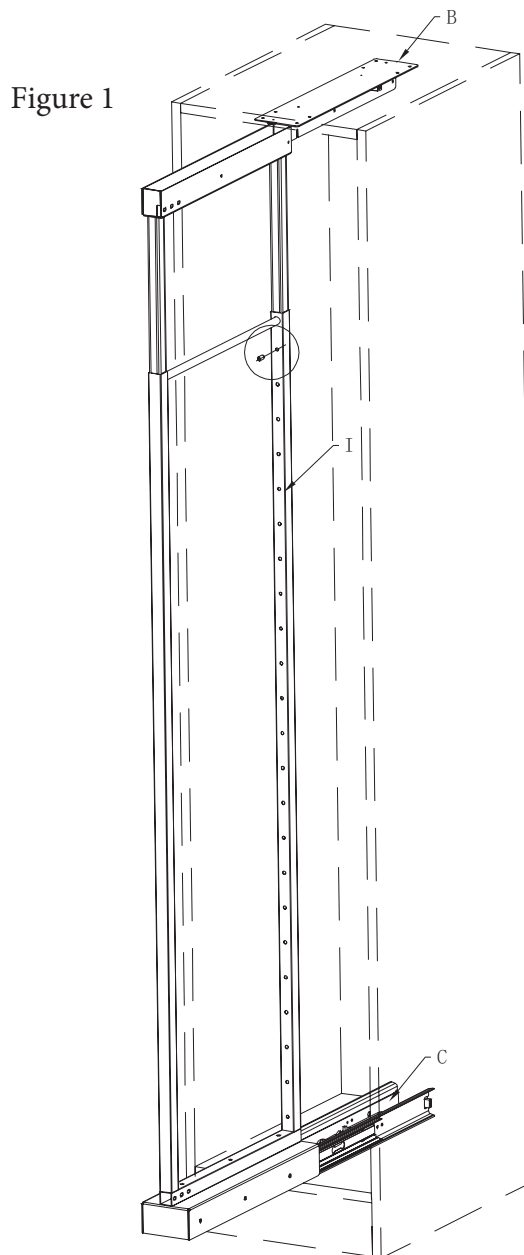


Figure 2


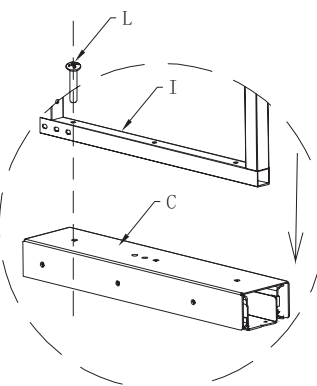


Figure 3

STEP 4 - Install T-type door panel connector

1. Draw the door panel centre positioning line, align the T-type door panel connector (E) to the centre positioning line and secure with ST4X20 screws.
2. Insert the T-type door panel connector (E) into the upper slide and the bottom slide, shown in Figure 2.

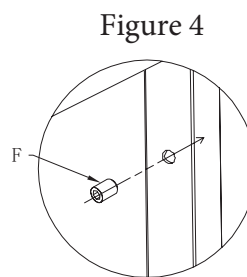


unit = mm

STEP 5 - Install the door panel

1. Insert the T-type door panel connector (E) into the upper slide and the bottom slide, secure with M6X12 screw (H).
2. Clamp the door panel connector (D) to the main frame, lock with ST4X20 screws (G).

Figure 1

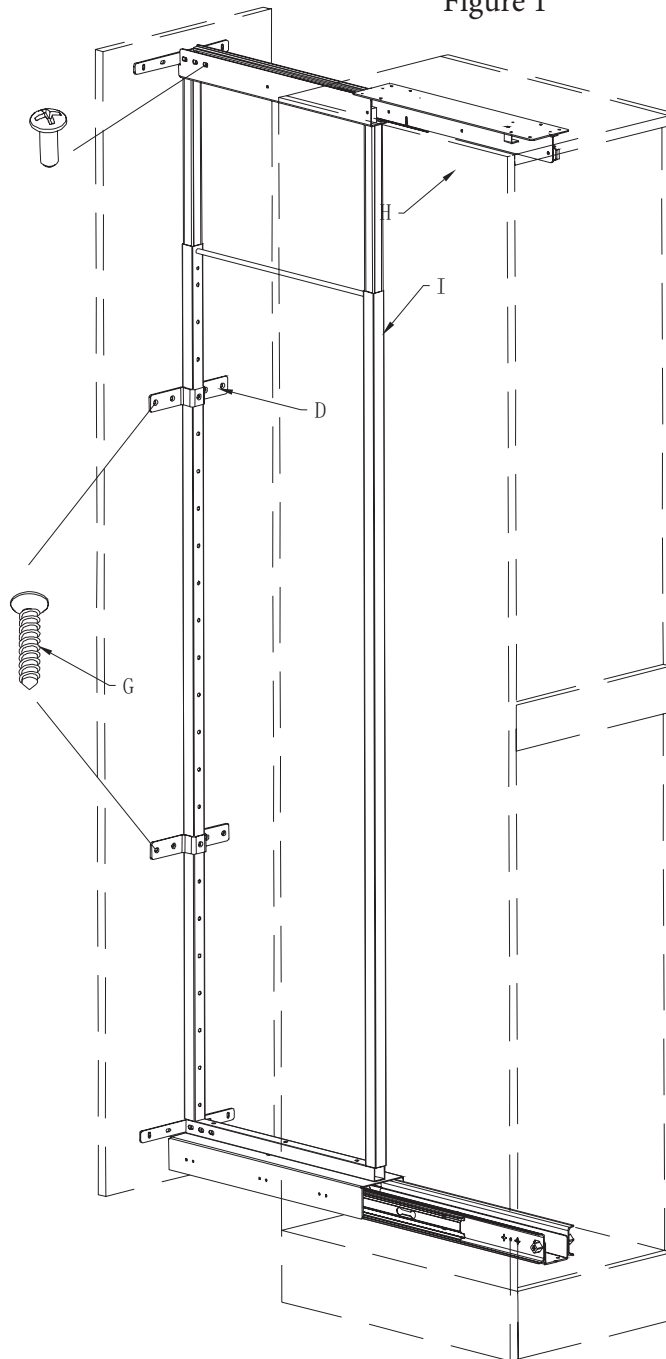

STEP 6 - Install basket

1. Fix the layer hook (J) to the main frame at the intervals of 260 mm or so, shown in Figure 1, carefully hang glass basket on the layer hook (J), as Figure 2-3.
2. Completed installation, as Figure 4.

Figure 2

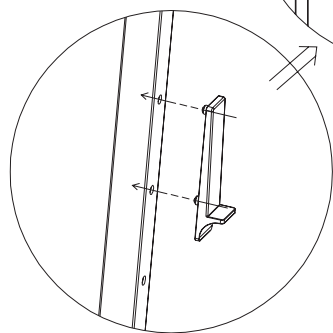
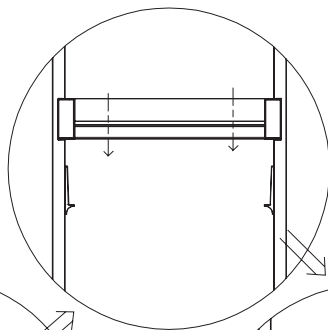


Figure 1


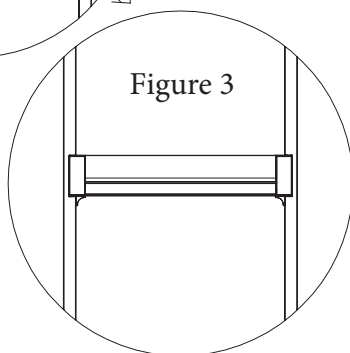


Figure 3

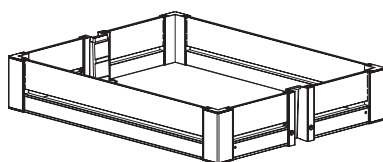

G20112

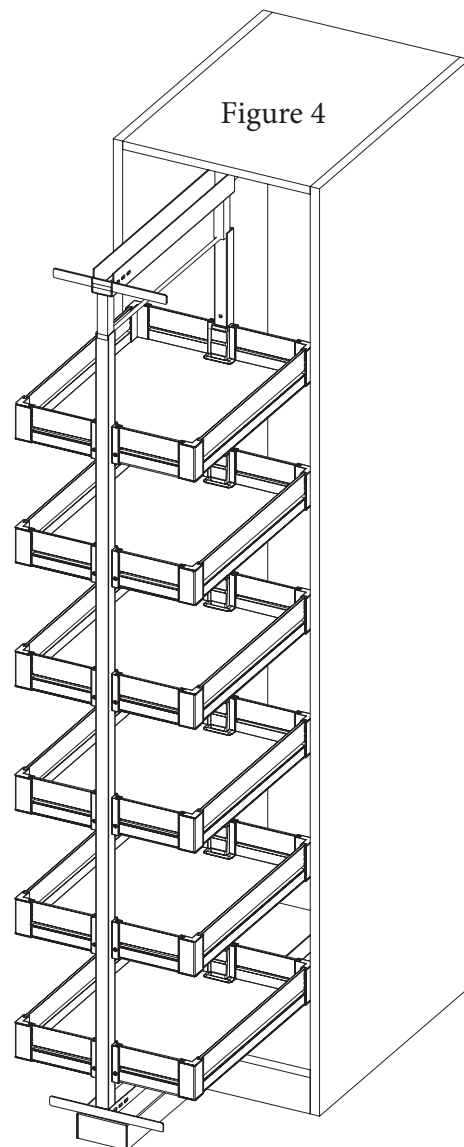


Figure 4

unit = mm