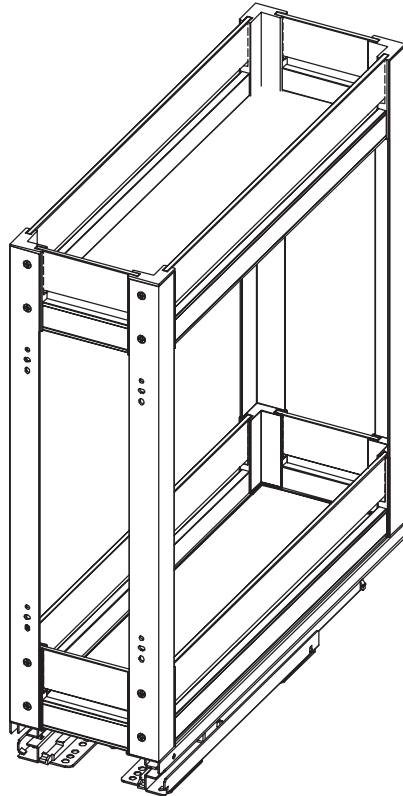



**Warning!**

Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

**MAXIMIZE SPACE,
MINIMIZE EFFORT.**

Part List


Please check the accessories list before installing.

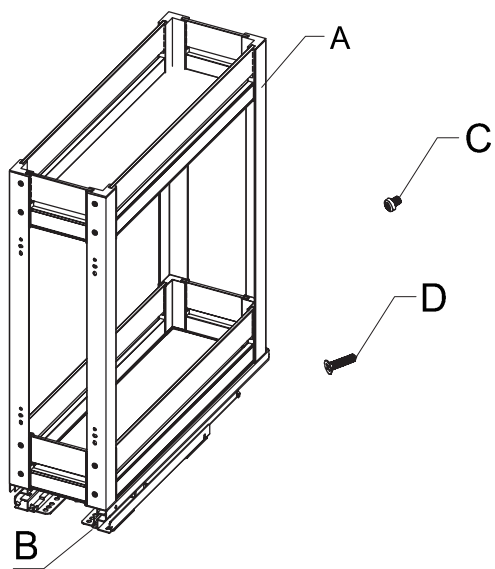

NO:	ITEM NAME	QTY
A	Seaning basket 450,400,300	1 pc
B	Slide	1 set
C	M4*6 Philip round head screw	2 pcs
D	ST4*16 Philip tapping scerew	16 pcs


Cabinet Size

Cabinet size requirements: Inner width greater than or equal to 164mm and a height equal to or greater than 560mm.

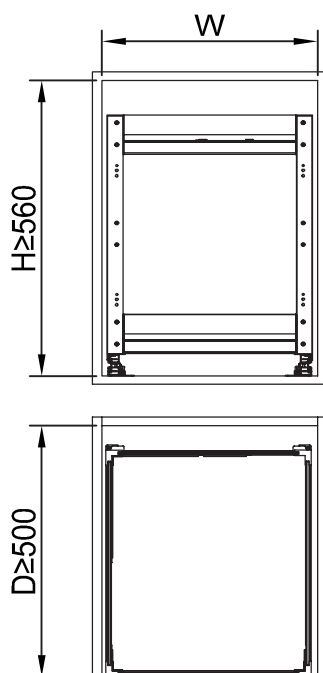


STEP 1 - Install the sides

- 1: Measure the center point between the slides (B) of the cabinet is 32mm as per the diagram on the left ($W1 = 32\text{mm}$).
- 2: Measure the slider hole spacing and distance from front of cabinet as per the diagram on the right. Mark with a pencil and install using ST4 tapping screws (D).

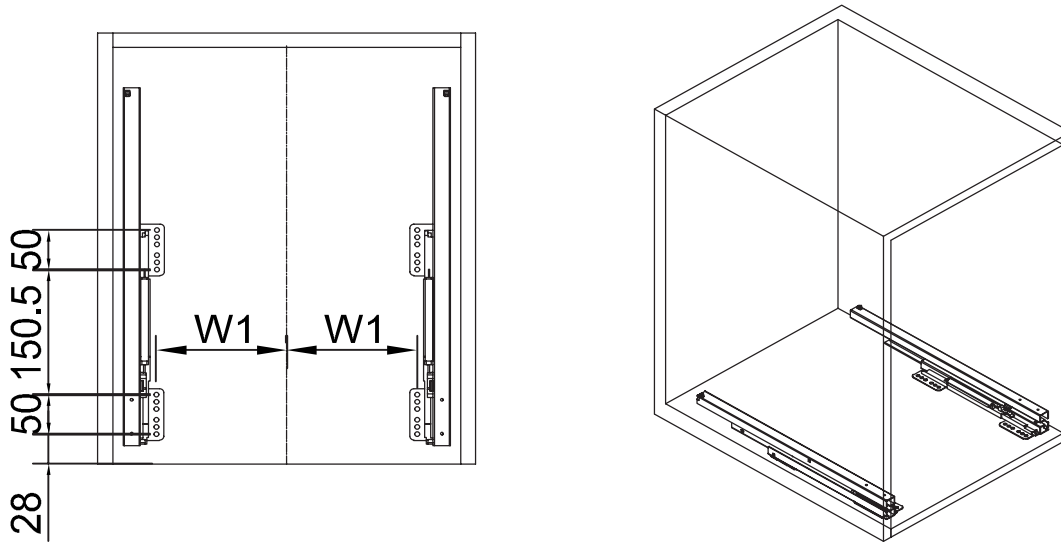

STEP 2 - Drill holes on the cabinet door

Measure the center of door panel as below figure, draw lines and drill holes 56mm wide from the center of the middle of the door ($W2 = 56\text{mm}$).

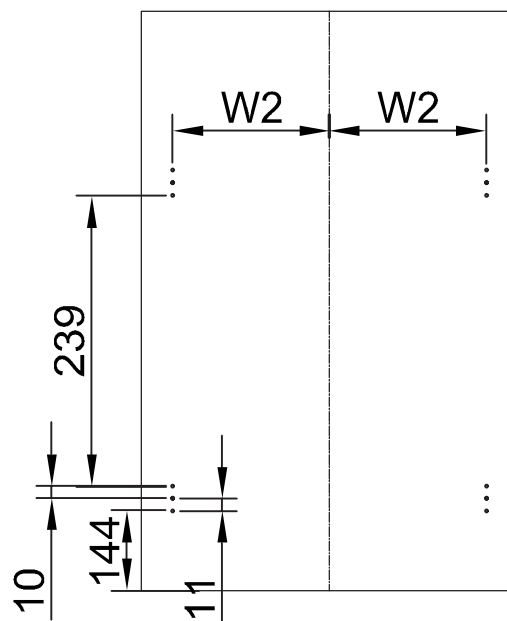

STEP 3 - *Install the basket and the door panel*

- 1: Put the basket (A) on the slides (B), fix it with M4 (C) screw.
- 2: Attach the door panel to the basket, align the pre-drilled holes of door panel on the basket holes, fit them with ST4 screws (D).

