


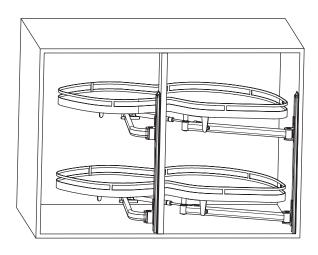

Hagen 31.9"



Warning!






Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

MAXIMIZE SPACE, MINIMIZE EFFORT.





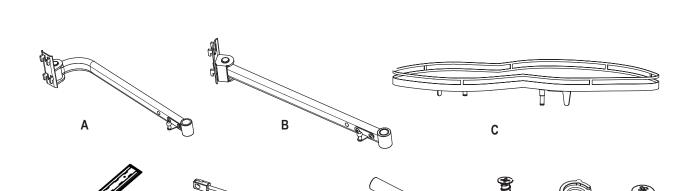


Ε





STEP 1 - Determine size requirements


Determine the size requirements of thecabinet according to Figure (1)

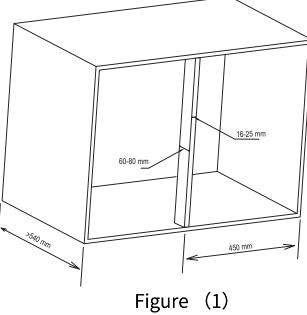

(1) unit = mm

STEP 2 - Install support frame

Align the support frame (D) according to Figure 2, install them on the side of the cabinet and the inner side of the middle wooden board. Make sure they are vertical, and fix them with ST4X16 Screws (G).

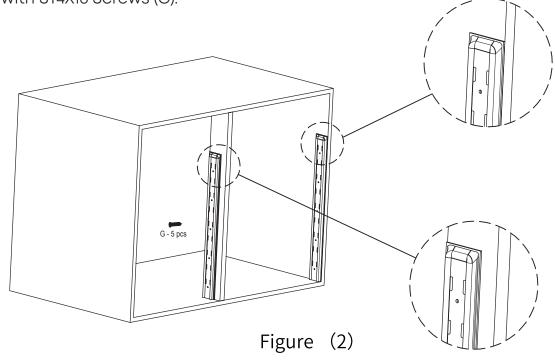



STEP 3 - Install swing frames

Install swing frame 1 (A) and swing frame (2) according to Figure 3 to ensure that the swing frame remains level, fix it with M4X6 screws (I), and then install support rod (E).

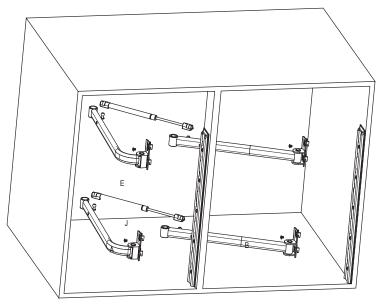


Figure (3)

STEP 4 - Install trays

Pull the swing fame out of the cabinet according to Figure 4, install the trays (C), and then install small support rods (F) in the appropriate position, paying attention to the small support rods.

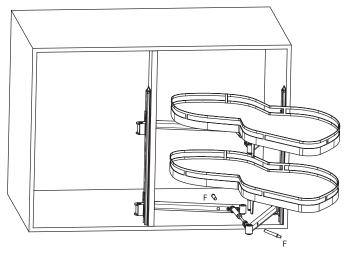


Figure (4)



Install buttons (H) according to Figure 5, and the installation is complete. Figure (5)