


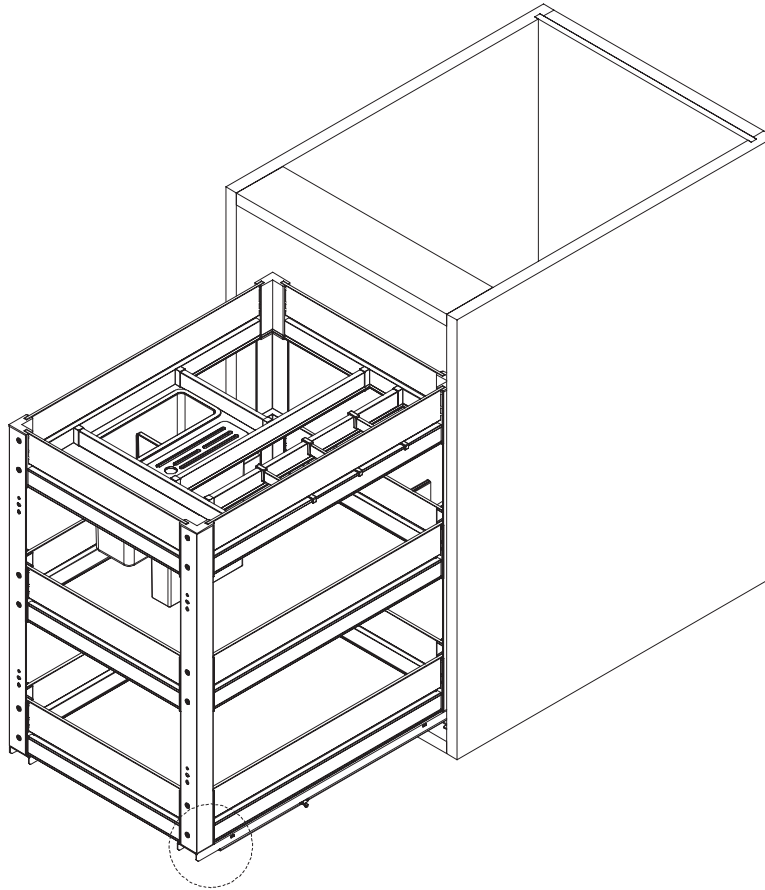

Warning!




Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

**MAXIMIZE SPACE,
MINIMIZE EFFORT.**


STEP 1 - Install the slide into the cabinet

Install the slide into the cabinet with ST4*16 screw, according to the sizes of figure 1. Note, the sliders can be installed on the side walls of your cabinet or base. Position the front edge of the slider 188mm from the front edge of your cabinet.

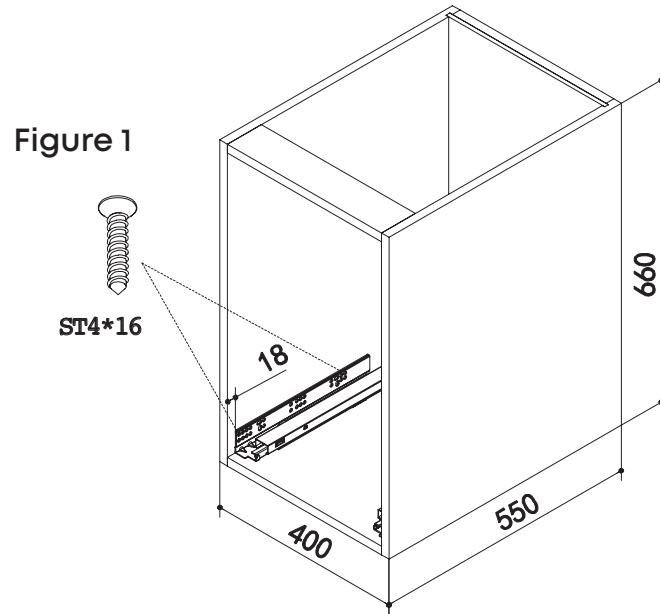

STEP 2 - Drilling holes on the door panels

Drilling holes on the door panels according to the size of figure 2. Alternatively you can use the drill template provided.

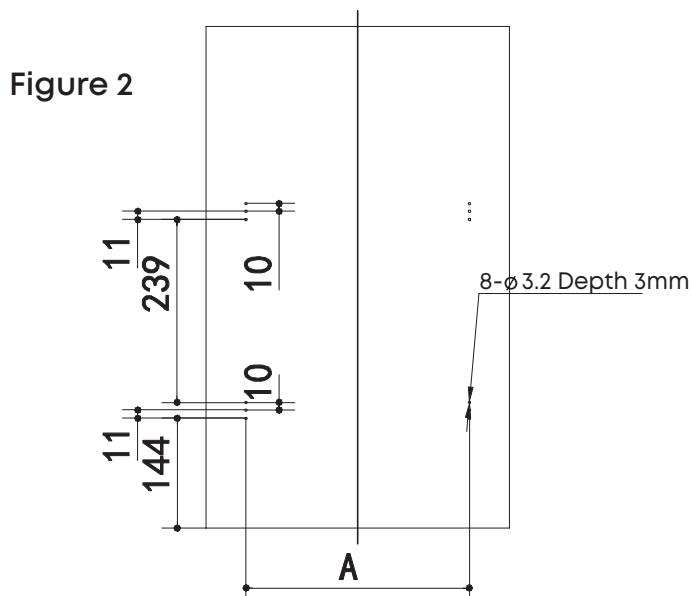


DOOR SIZE	
G20151G	342mm
G20151H	292mm

STEP 3 - Install the basket

Put the basket on the slide and push it into the cabinet, and complete the installation of the basket after hearing the sound of "click".

(Note: The hook under the basket is hooked to the slide for correct installation, as show in Figure 3-1.)

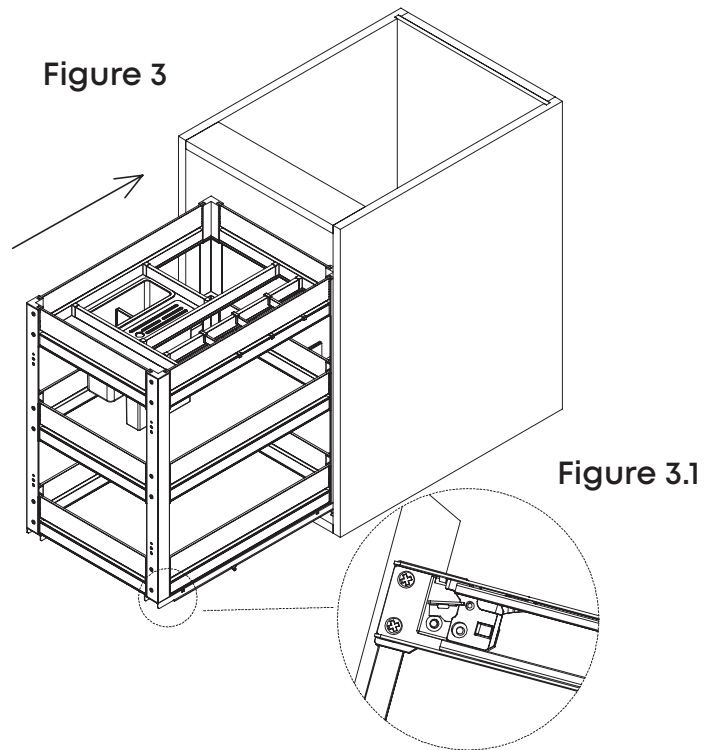

STEP 4 - Install the door panel

Put the door panel on the basket, align the holes in the basket with the holes drilled in the door. Use the ST4*16 screw to fix the door panel, then complete the installation, as show in Figure 4.

