
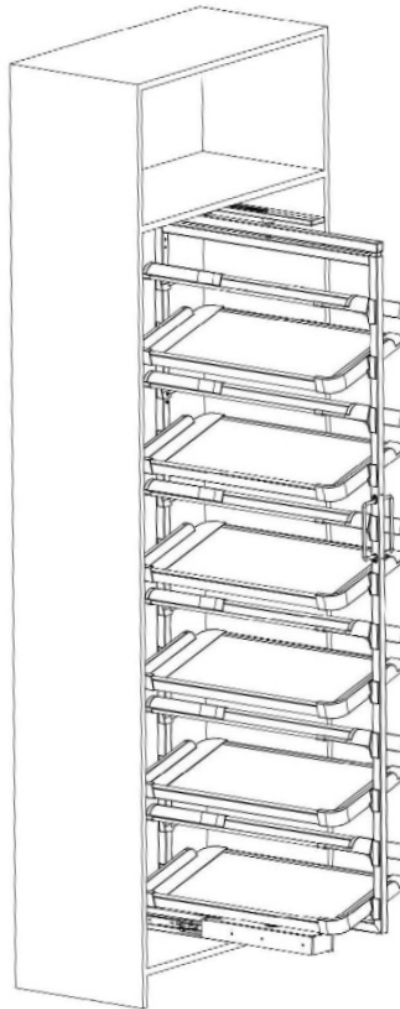


**Warning!**

Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.


**MAXIMIZE SPACE,
MINIMIZE EFFORT.**

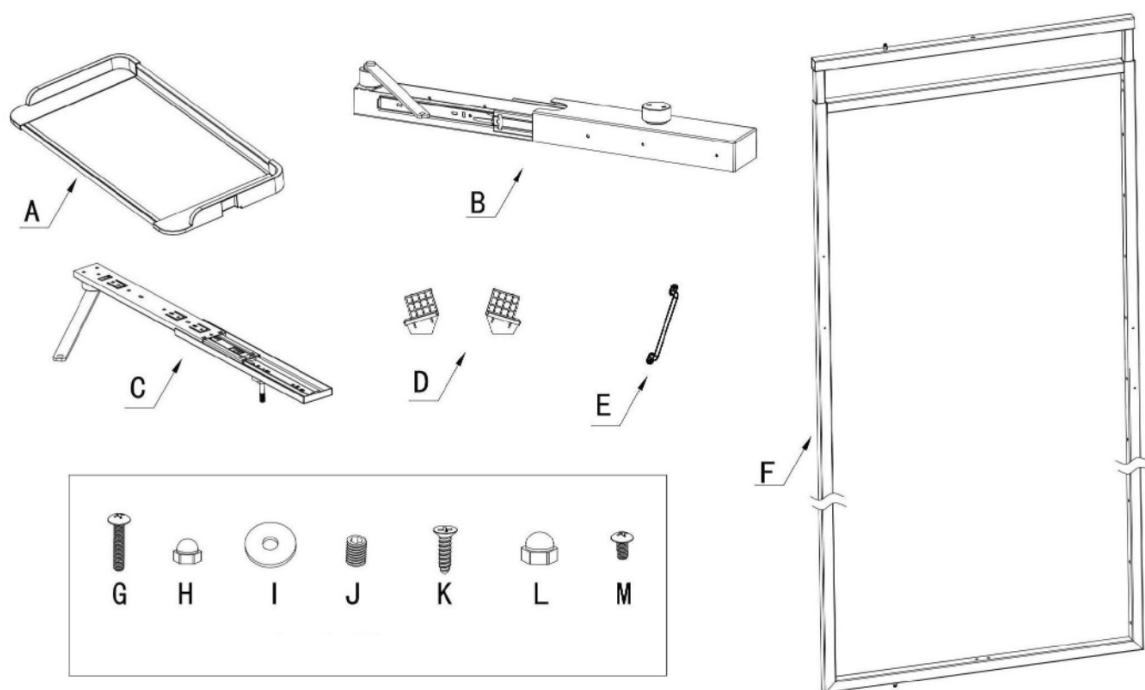

LIST OF PARTS


No.	Quantity	Description
A	2 pcs	Shoe rack
B	1 pc	Bottom slide
C	1 pc	Upper slide
D	12 pairs	Shoe rack hooks
E	2pcs	Frame handle
F	1 pc	Cardinal shelf
G	2 pcs	M6 Screw
H	2 pcs	MS Screw nut
I	2 pcs	Gasket
J	4 pcs	M6X8 Socket head screw
K	7 pcs	M4X16 Screw
L	1 pc	M8 Screw
M	4 pcs	M4 Screw

Product measurements

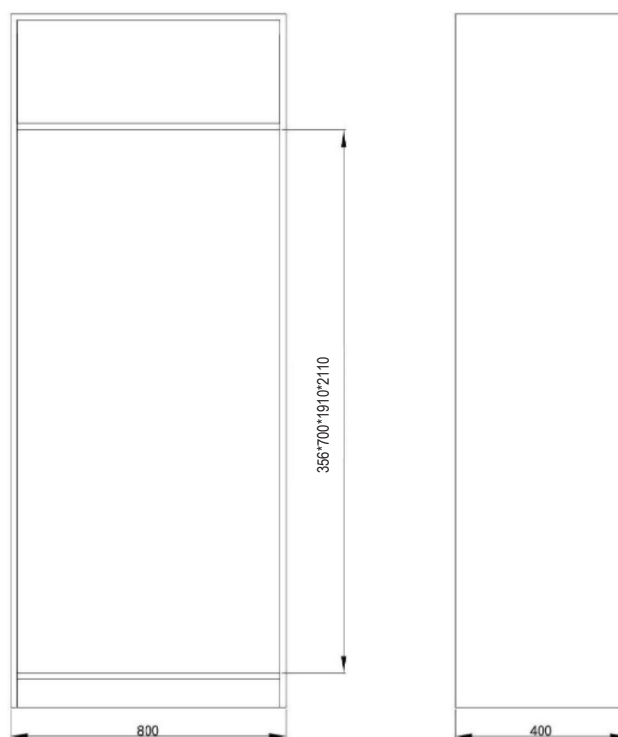




STEP 1 - Separate the bottom slide (B) and top slide (C)

According to the direction of the arrow as shown in the circle, push up the slide, then push down the other side slide, and at the same time pull out the outer slide. Repeat the same thing for the top slide (C).

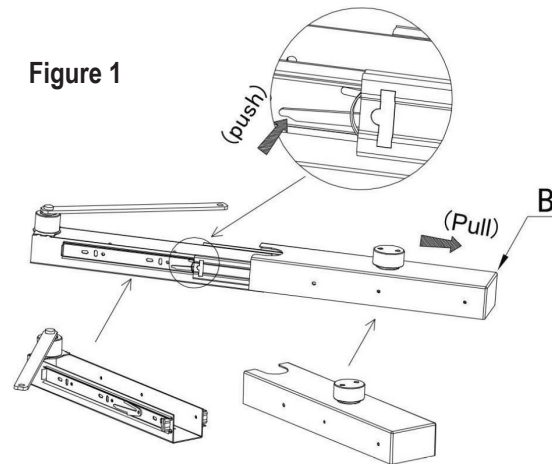

STEP 2 - Install top slide and bottom slide to the cabinet

Screw down top slide and bottom slide using M4X16 screws (K) as shown on Figure 2 and 3. Slide back the other two slides.

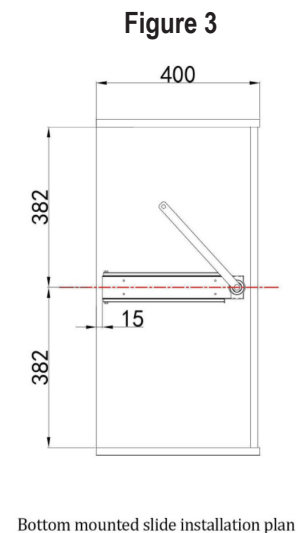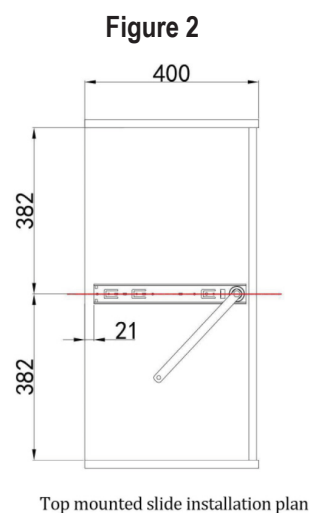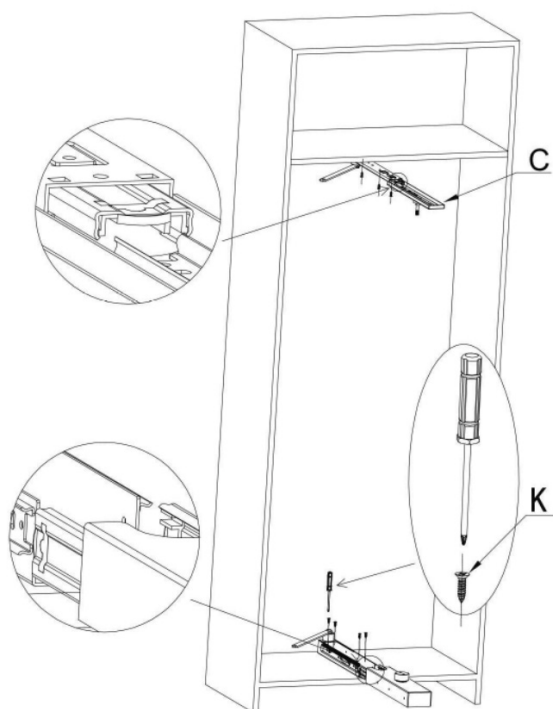


unit = mm

STEP 3 - Install cardinal shelf

1. Adjust the frame to the suitable cabinet height, then tighten with the M6X8 socket head screws (J). Screw the top of the cardinal shelf (F) with a M8 screw (L) and bottom with M6 screws (G). As shown in Figure 4-1 and Figure 4-2, lock the long metal part using M5 screw nut (H) and gasket (I).
2. Install frame handle (E) using M4 screws (M) as shown in Figure 4-3.

Figure 4

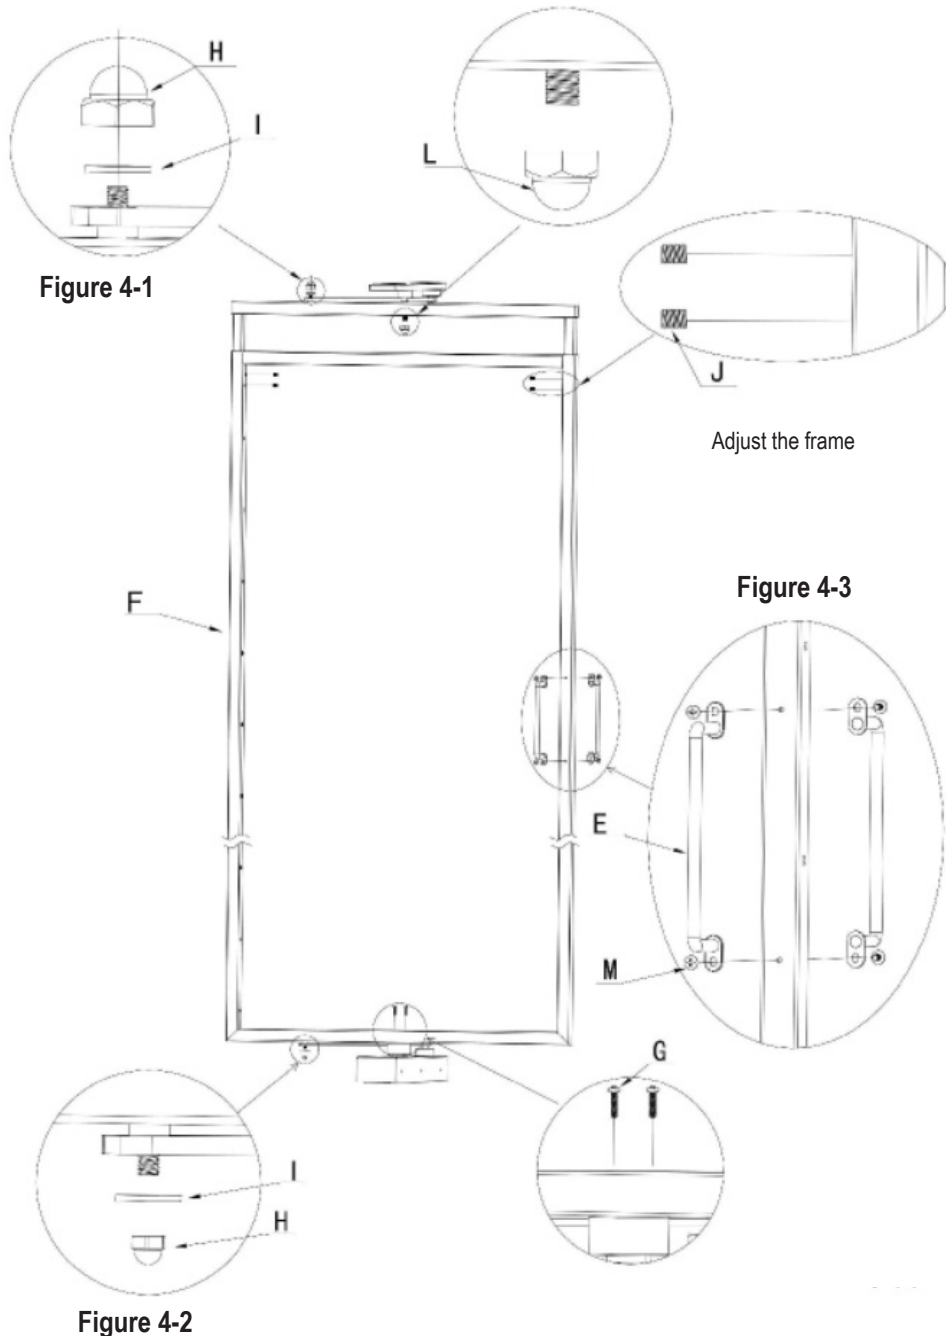

STEP 4 - Install the main frame

Insert shoe rack hooks (D) in the holes shown in Figure 5-1.

Put the shoe racks (A) on the corresponding hooks as shown in Figure 5-2.

Figure 5

