
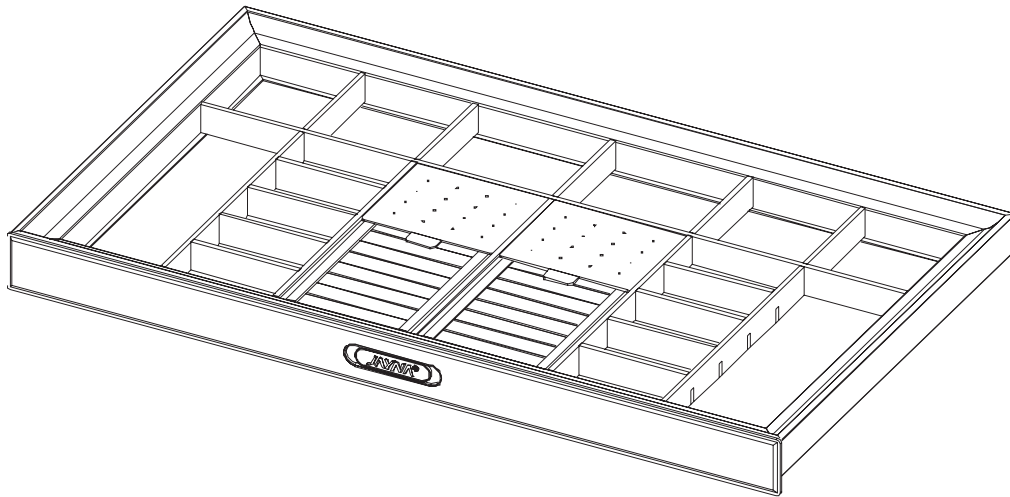


**Warning!**


Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

**MAXIMIZE SPACE,  
MINIMIZE EFFORT.**

## PRODUCT SPECIFICATIONS & PARTS

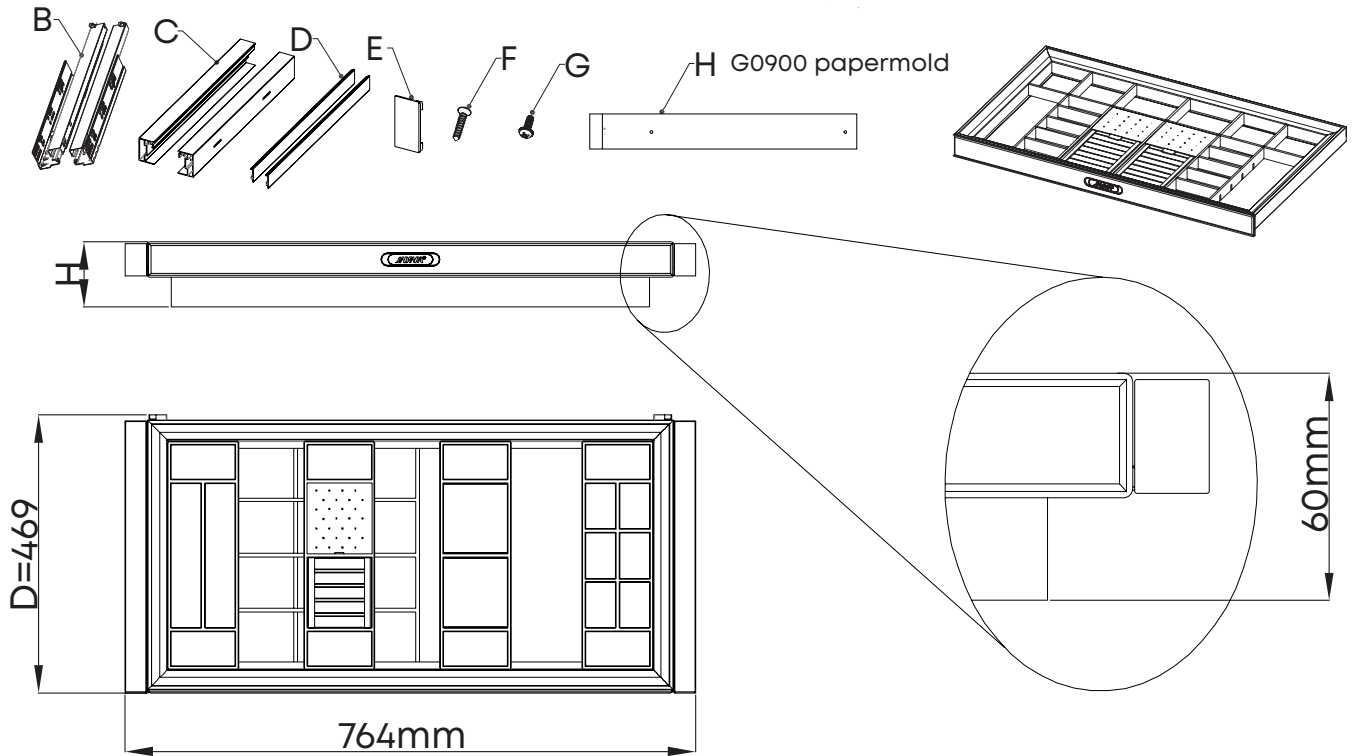

## INSTALLATION REQUIREMENTS

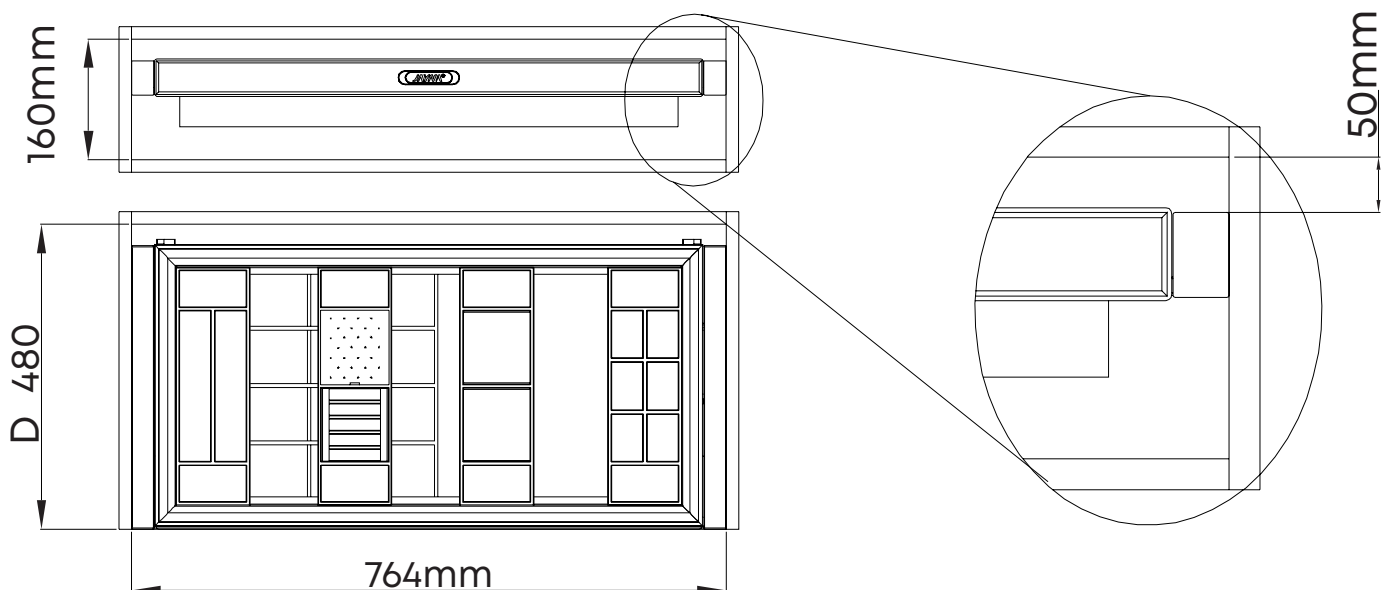


## STEP 1 - Install the Aluminum Slide Rails

Refer to the diagram and mark positioning lines inside the cabinet according to the installation specifications.

Align the aluminum slide rail tightly along the marked line and secure it using the provided ST4\*16 screws.


Figure 1

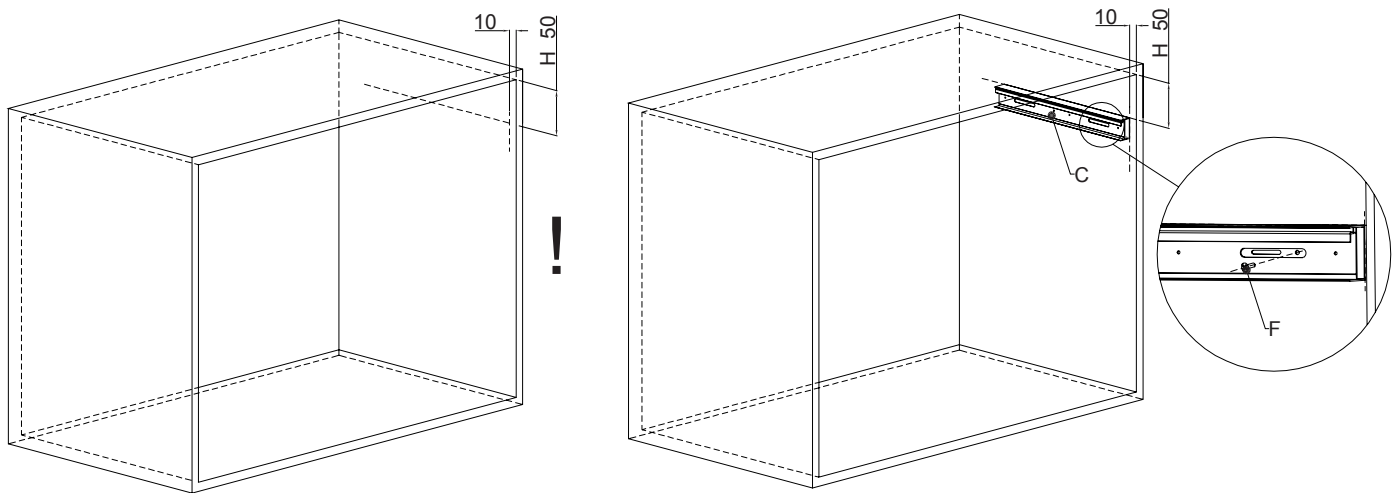

## STEP 2 - Install the Slides


Insert the slide (B) into the mounted aluminum slide rail (C) as shown in the diagram. Secure the slide in place using the provided M4\*8 screws (G).

Figure 2

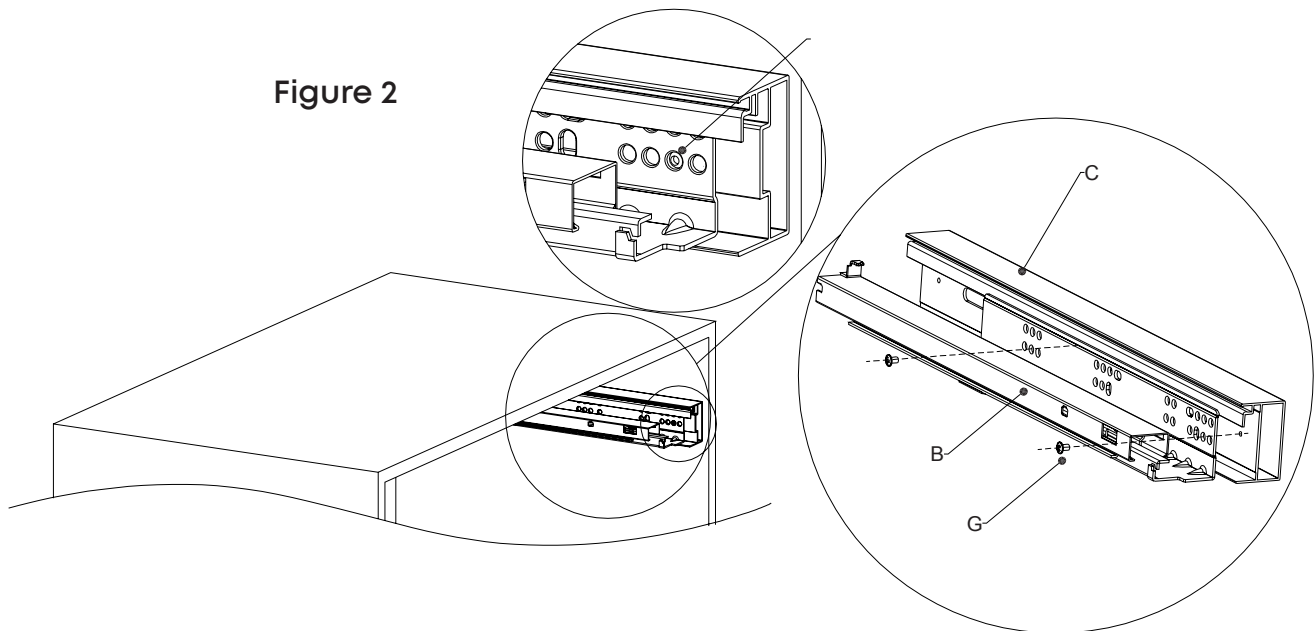


## STEP 3 - Install the Frame

Pull the slide (B) outward, then carefully position the frame (A) onto the slide. Push the frame inward until you hear a “click” — this indicates the quick-release mechanism has securely engaged.

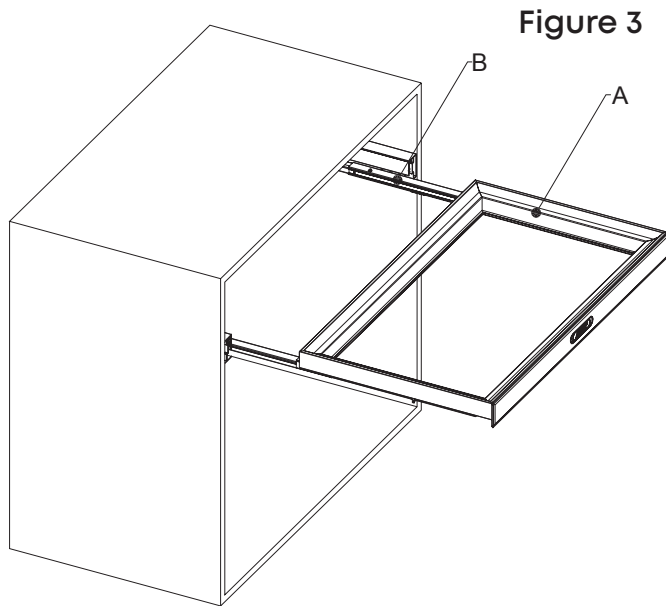

**Figure 3.1**

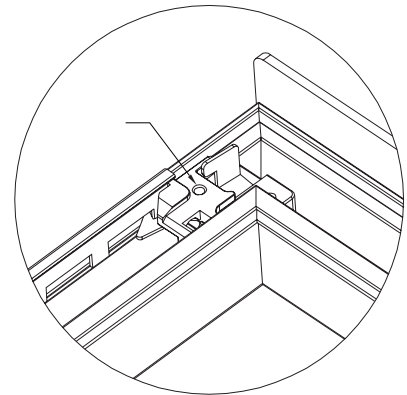

## STEP 4 - Finalize Installation

After confirming the frame is securely installed, insert the aluminum tube cover (D) into the slide aluminum tube.

**Figure 4**

