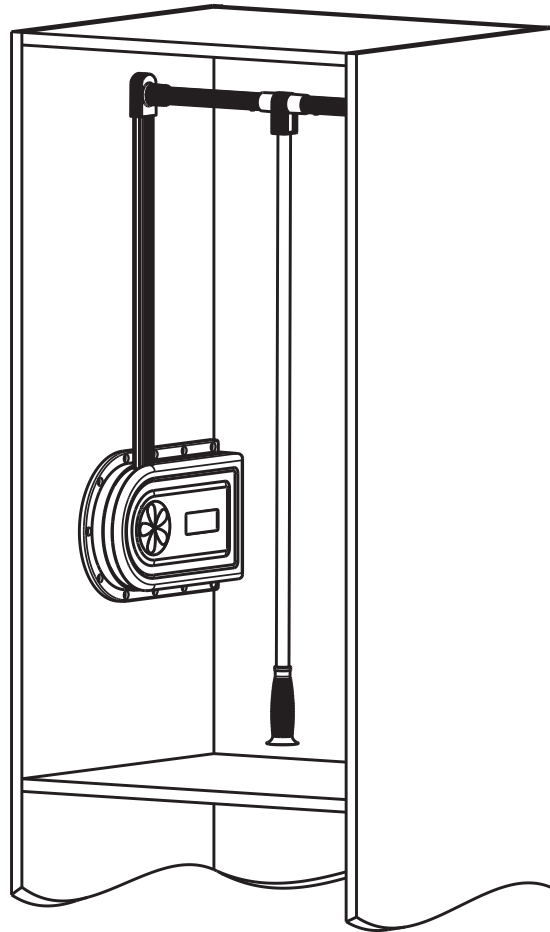



**Warning!**

Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

**MAXIMIZE SPACE,
MINIMIZE EFFORT.**

STEP 1 - Install the Brackets


Mark a vertical line on the left interior wall of the cabinet. Align the left bracket (A) with this line and secure it using ST4*20 countersunk screws (G). Repeat the same process for the right bracket (B), ensuring both sides are level and aligned.

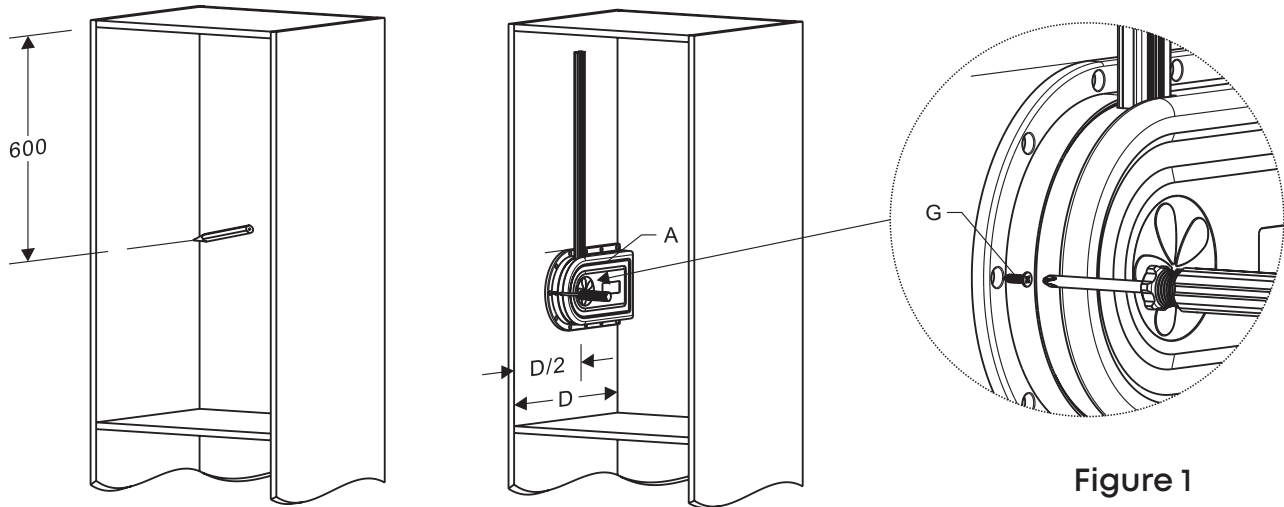

STEP 2 - Attach the Drawbar Assembly

Fix the drawbar (D) to the clothes rod assembly (C) using the ST4*10 tapping screws (F). Ensure the connection is tight and flush.


Figure 2

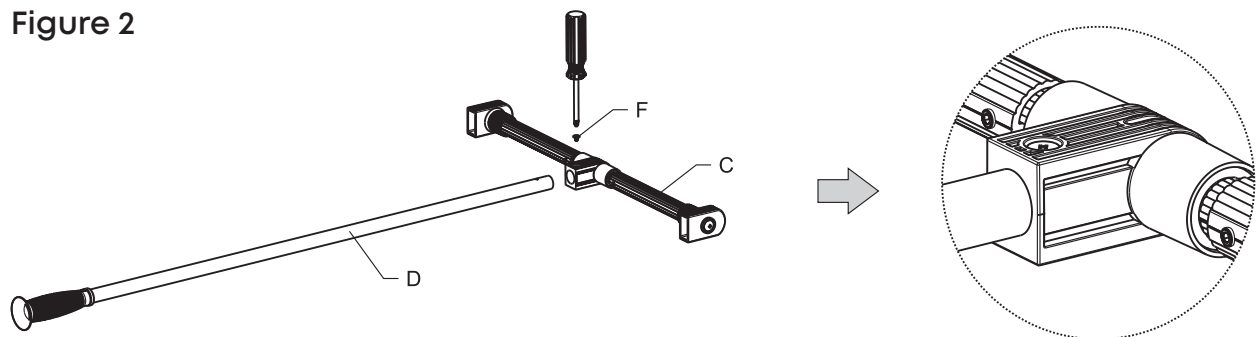

STEP 3 - Adjust Clothes Rod Length

Using the hex wrench (E), loosen the two hex screws on either end of the clothes rod (C) to adjust the rod to the correct width.

Make sure it fits snugly between the mounted brackets.

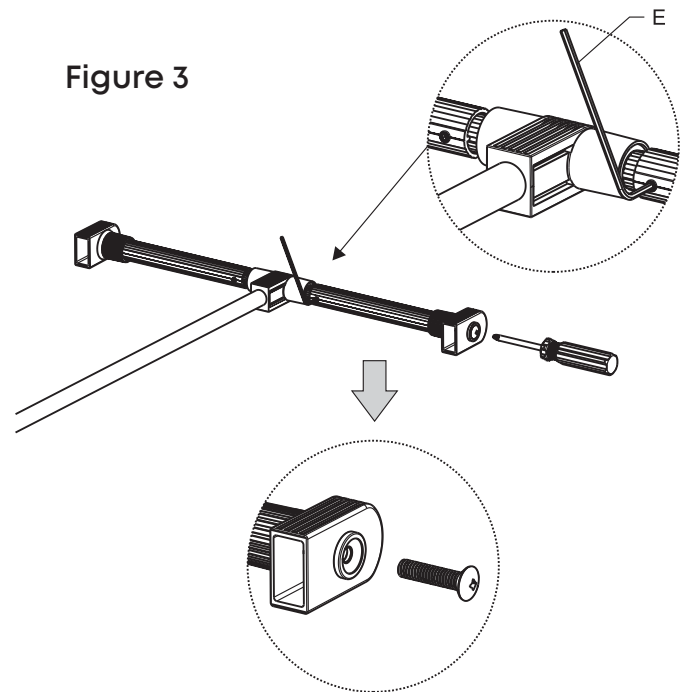


STEP 4 - Center and Lock the Drawbar

Adjust the drawbar (D) so it is centered along the clothes rod (C).

Use the hex wrench (E) to lock one side of the drawbar into place.

Test by pulling and pushing the drawbar several times to ensure smooth and silent movement.

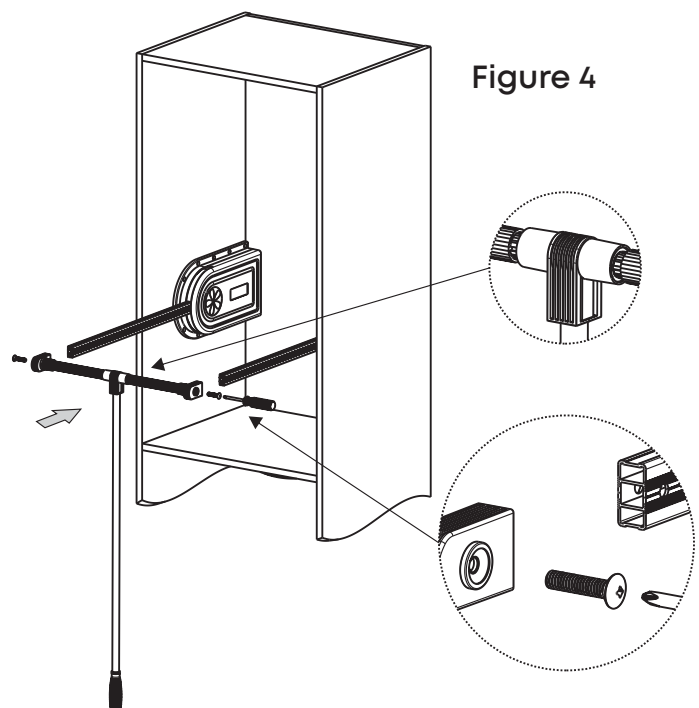

STEP 3 - Final Check and Lock

Put the basket on the slide and push it into the cabinet, and complete the installation of the basket after hearing the sound of "click".

(Note: The hook under the basket is hooked to the slide for correct installation, as show in Figure 3-1.)

Figure 5

