**Warning!**


Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

**MAXIMIZE SPACE,
MINIMIZE EFFORT.**

STEP 1 - Assemble the Frame

Connect the frame tubes (D) to the 450mm slides (B), fastening with M4*12 screws (F).

Figure 1

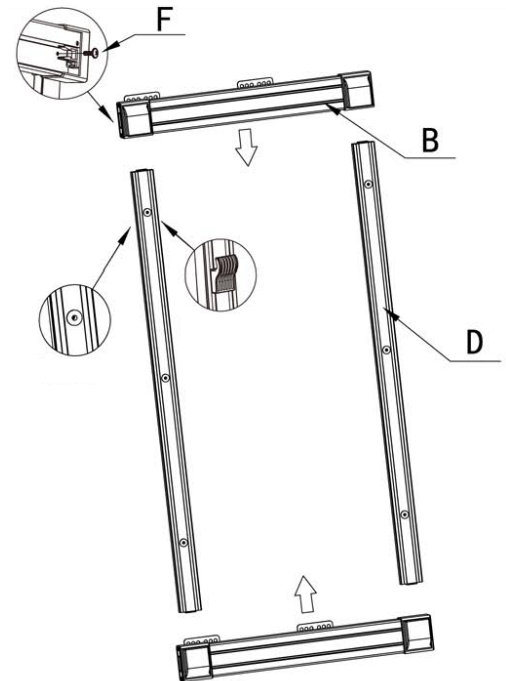


STEP 2 - Install the Slides and Attach Plastic Covers

Position the plastic covers (A) against the interior side walls of the cabinet.

Align the 450mm slides (B) on top of the plastic covers, then secure them to the cabinet using the provided ST4*16 screws (E), screwing through the designated holes.

Once the slides are firmly attached, flip the hinged section of each plastic cover (A) over to conceal the screw heads.

Ensure both slides are level and aligned for smooth motion.

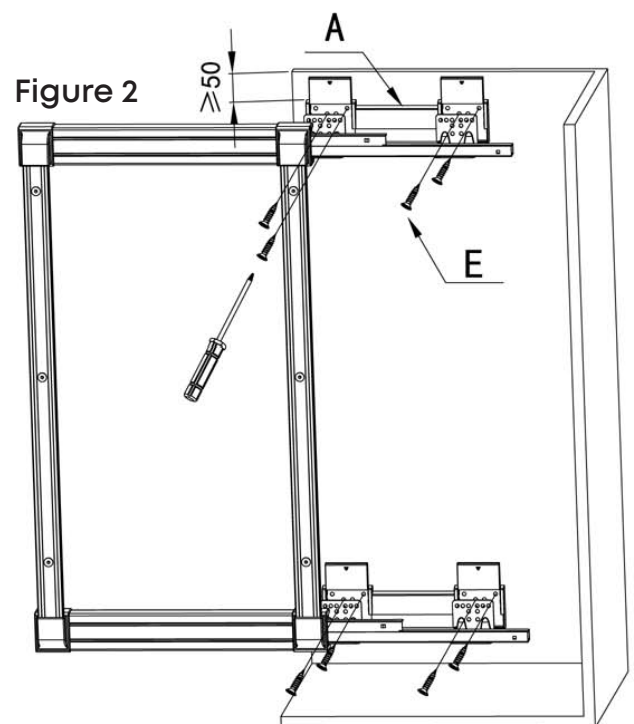

STEP 3 - *Install the basket*

Finally, hook the baskets onto the frame tubes to complete the installation. Ensure each basket is securely seated and glides smoothly within the frame.

Figure 3

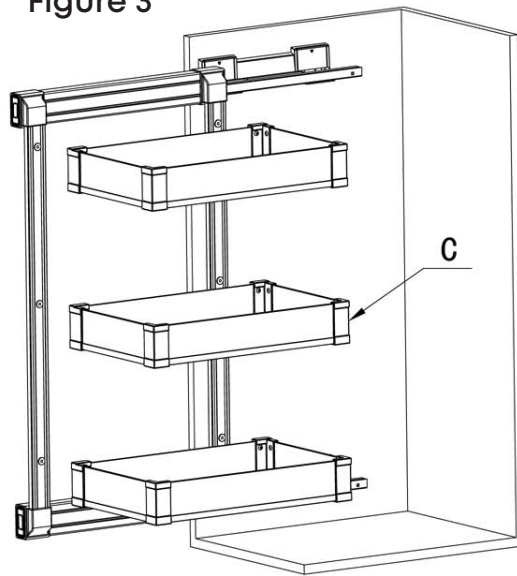


Figure 3.1

