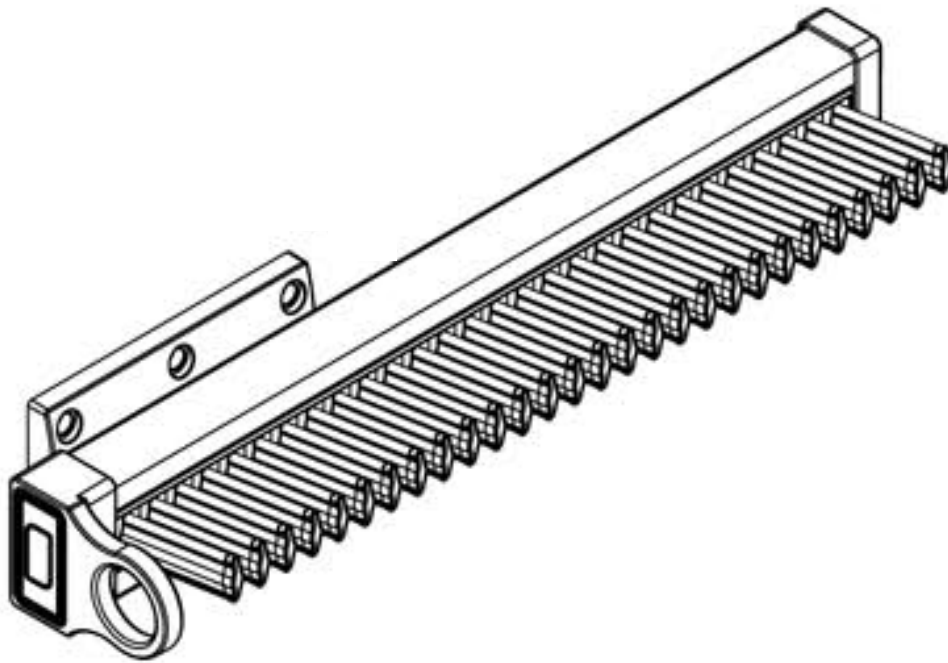


**Warning!**


Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

**MAXIMIZE SPACE,
MINIMIZE EFFORT.**

STEP 1 - Position the Rack

Place the tie rack frame (A) against the inner side panels of the cabinet, ensuring it is centered and level.

Figure 1

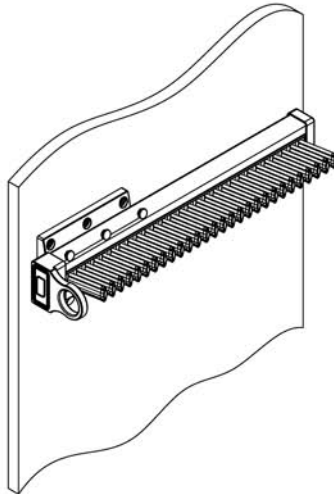


STEP 2 - Secure with Screws

Fasten the frame directly to the cabinet using the ST4*16 screws (B) through the pre-drilled mounting holes.

Use a screwdriver or drill to ensure a tight fit on both sides.

Figure 2

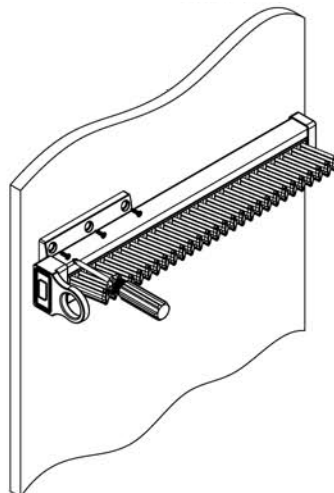

STEP 3 - *Finish Installation*

Snap the slide covers (D) over the installed slides to conceal the screws and provide a clean finish.

Figure 3

