


**Warning!**

Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

TOOLS REQUIRED & LAYOUT


Installation is the same regardless of handle model shown

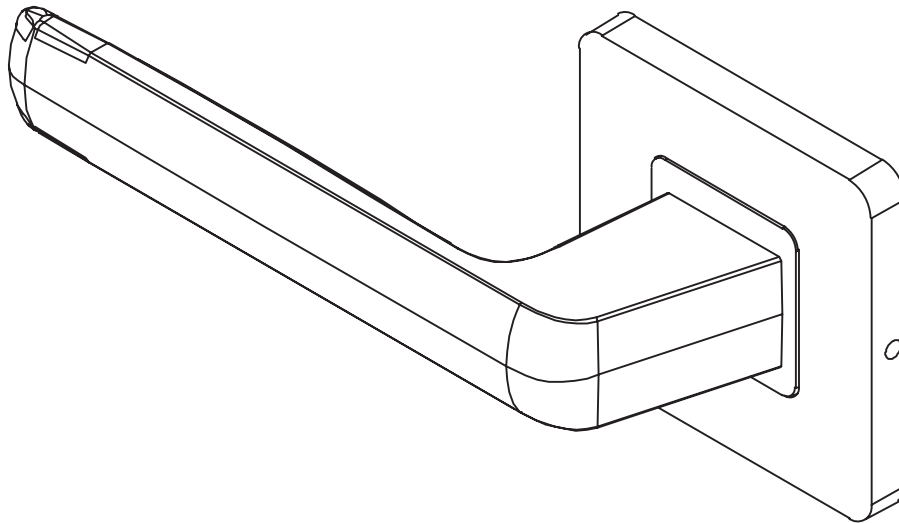


Phillips Screwdriver



Pencil

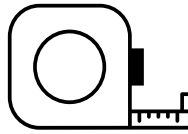


Tape Measure

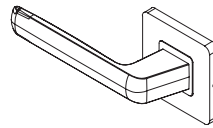



STEP 1 - Mark the position for the screws

Use the template to mark the position for the screws by piercing holes on door. Your template may differ from diagram.

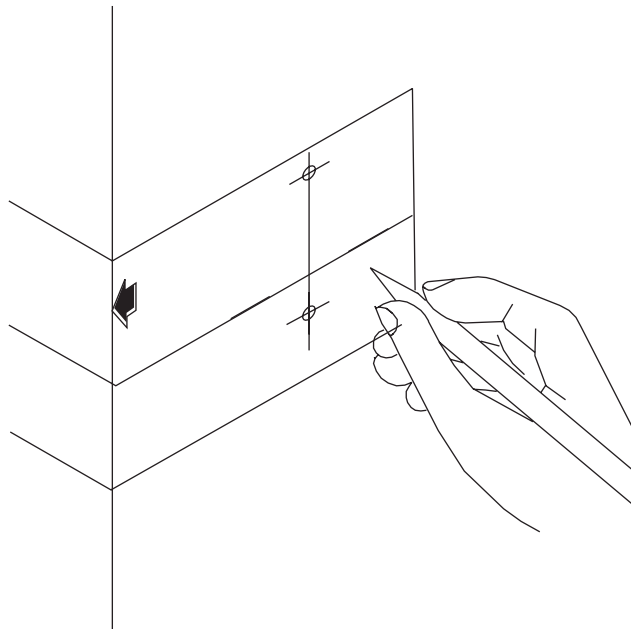


STEP 2 - Drill the holes and install

Make sure proper drill bit size is used.

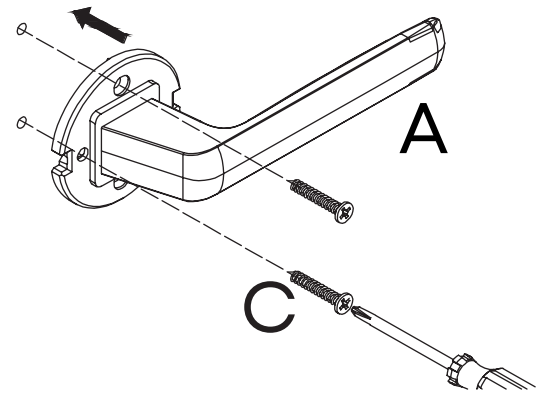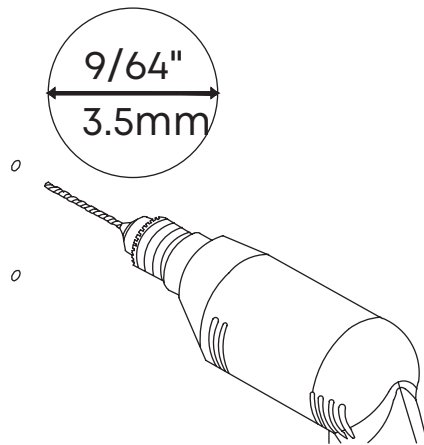

STEP 3 - Install faceplate and set screw

Use set screw to secure to the assembly.

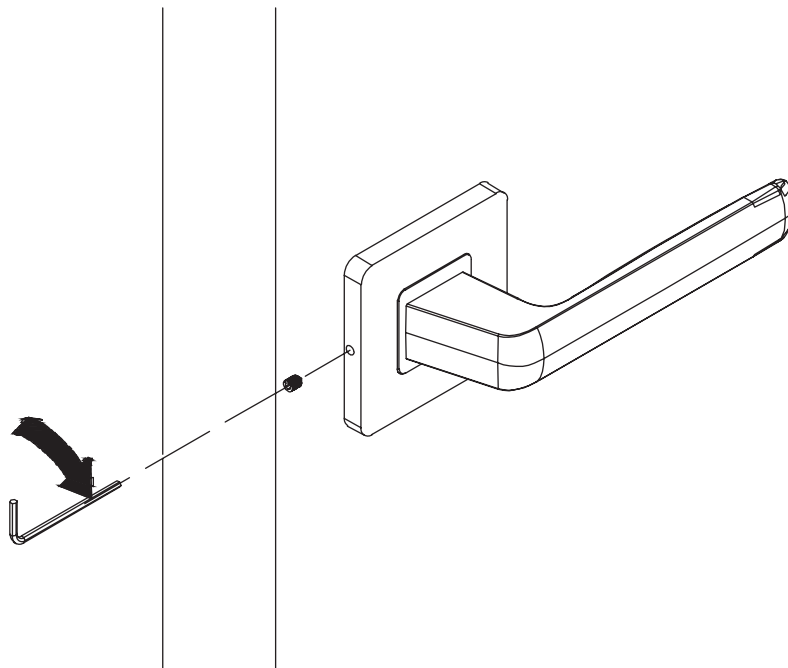

SUPPLIED DRILL TEMPLATE

IMPORTANT: Print template to scale.

