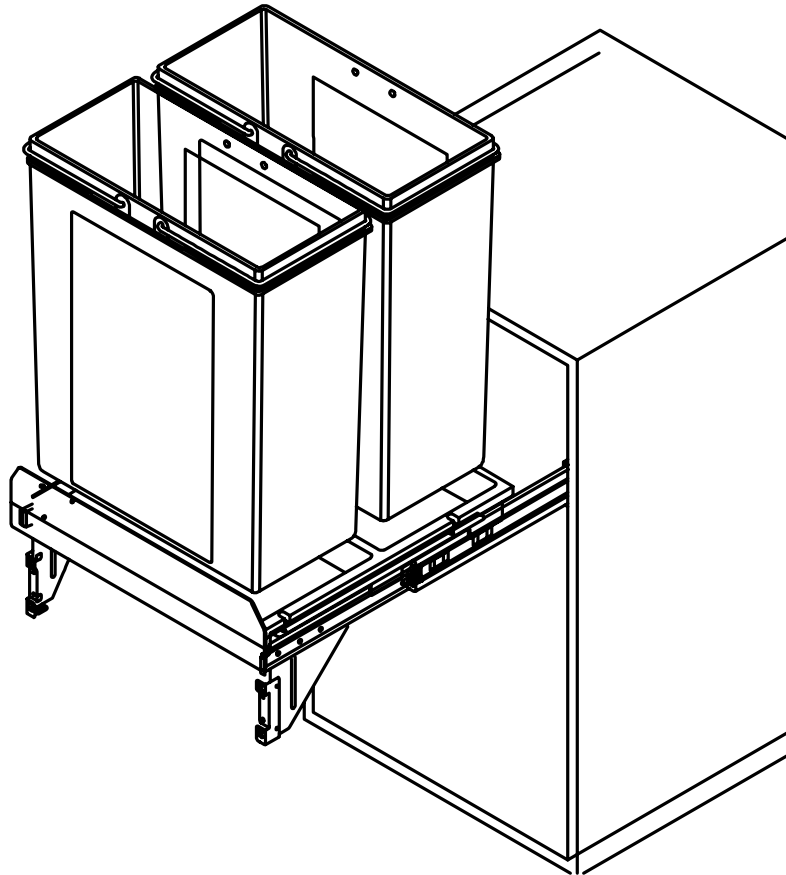



**Warning!**

Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

**MAXIMIZE SPACE,
MINIMIZE EFFORT.**


STEP 1 - Mark Pilot Holes

Mark and drill 6 pilot holes on each cabinet side for runners and lid brackets.

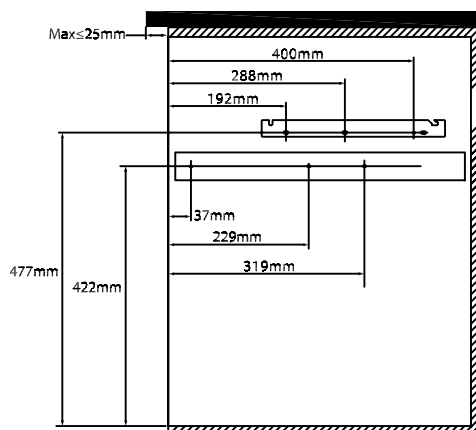


STEP 2 - Prepare the Runners

Lift the locking levers and remove the front part of each runner. Ensure the shoulder faces outward.

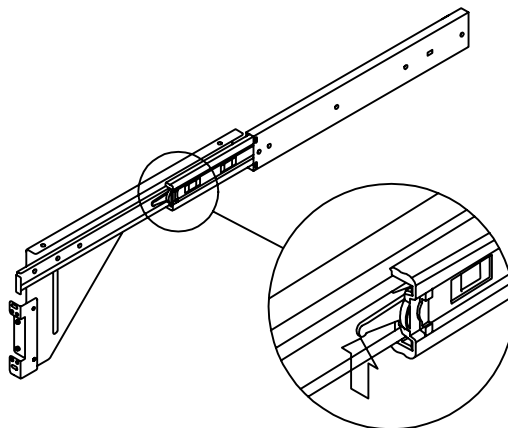


STEP 3 - Install Lid Brackets and Runners

Attach lid brackets (D/E) and runners (F/G) to the cabinet sides using screws A.

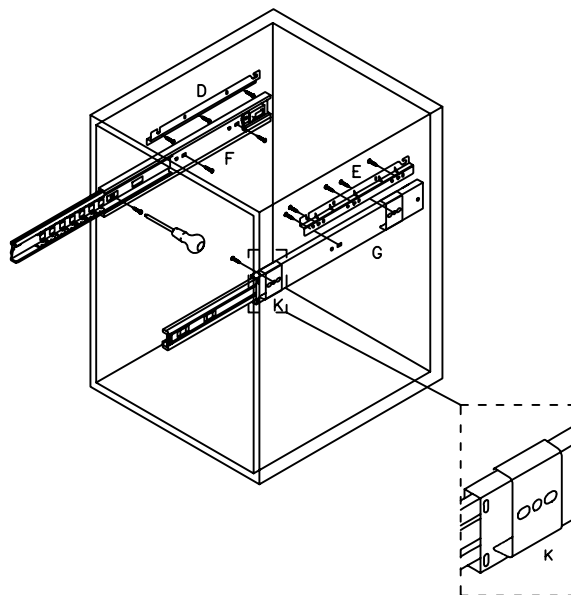


STEP 4 - Mount Brackets to Door

Mark screw points using the provided diagram.
Attach door brackets using screws B.

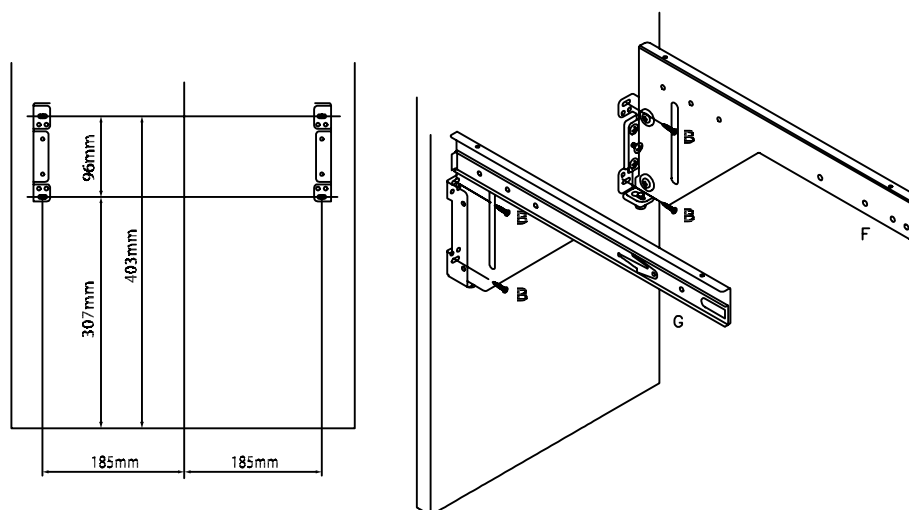


STEP 5 - Reattach the Runners

Slide the front runner sections back in until the locking levers click securely into place.

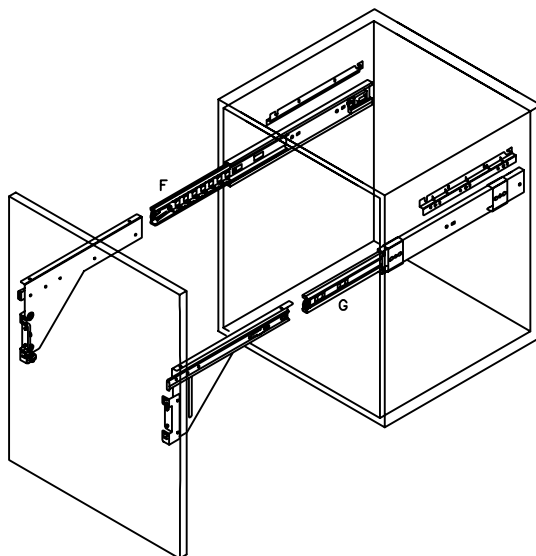


STEP 6 - Mount the Frame

Place the metal frame (I) on top of the mounted runners and secure it using screws C.

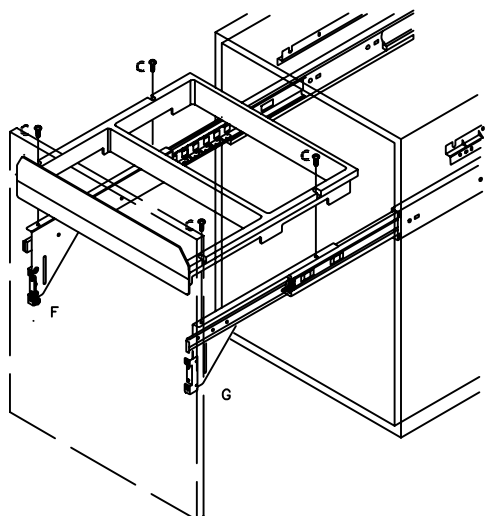


STEP 7 - Attach the Lid

Install the lid (H) by sliding it into the lid brackets. It should snap or click into place.

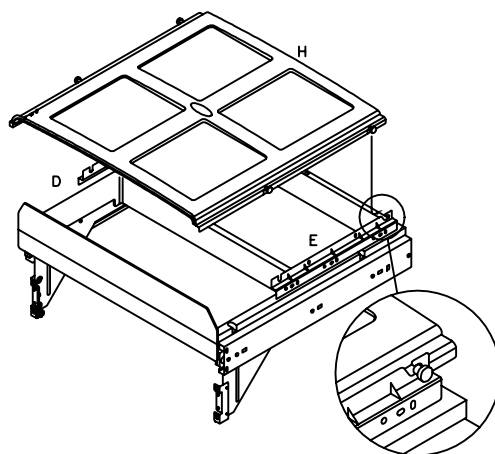

STEP 8 - Align the Door

Use the adjustment screws on the brackets to align the door flush with the cabinet face.

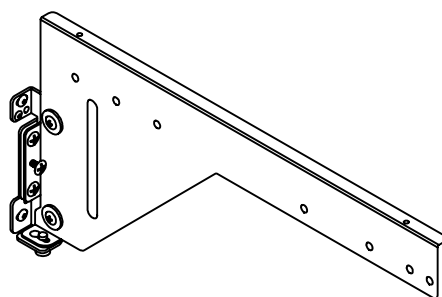

STEP 8 - *Align the Door*

Place the ironing board assembly in the center of the cabinet, ensuring it is set 15 mm back from the front edge.

