
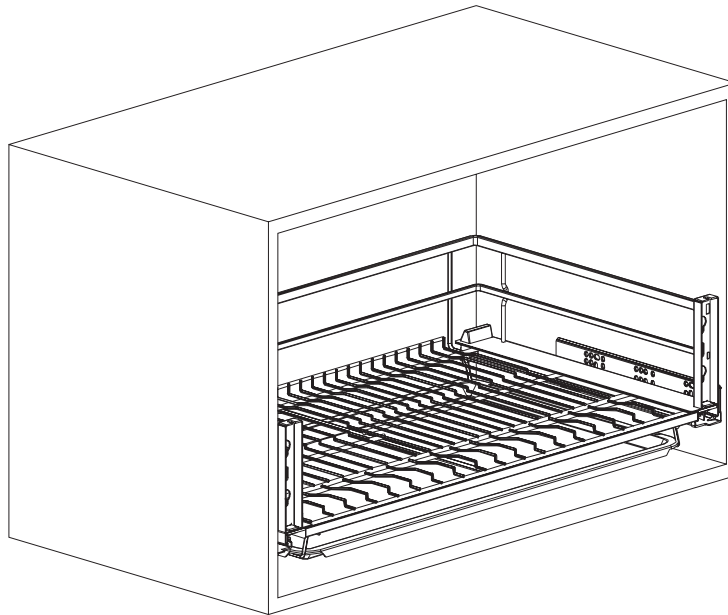


**Warning!**

Be sure to read and fully understand this document before installing, operating, your Stazz product. Failure to do so can result in item failure, property damage, or serious injury. Item failure, injury or property damage due to improper installation is not covered by warranty.

**MAXIMIZE SPACE,
MINIMIZE EFFORT.**

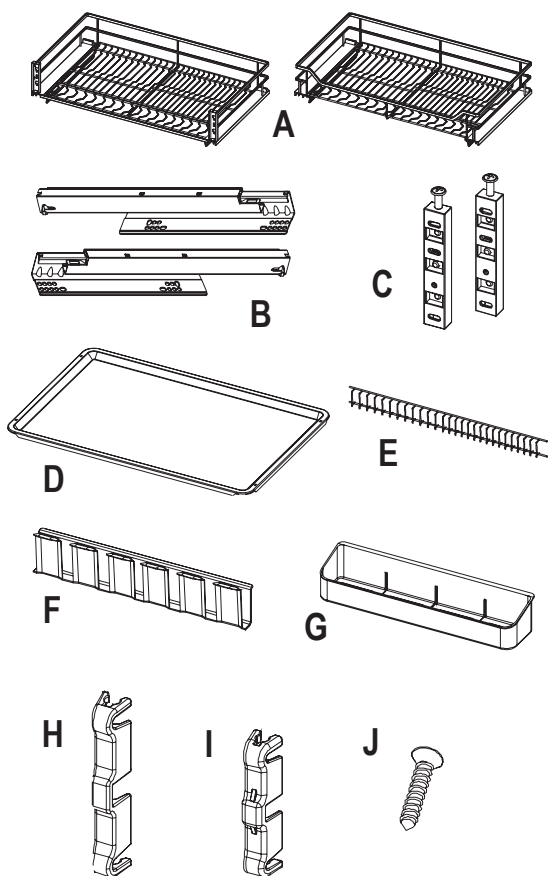



LIST OF PARTS

No.	Quantity	Description
A	1 set	G20244/GA20244 basket
B	1 pc	Left and right slide
C	2 pcs	Door panel mounting components (include screws)
D	1 pc	Water tray
E	1 pc	Dish rack backrest
F	1 pc	Plastic cup holder
G	1 pc	Plastic hanging chopsticks box
H	2 pcs	Backrest - left and right clips
I	1 pc	Backrest - middle clips

Product Specifications

Width (W) in the table, Height 215mm, Depth 467mm


Item	Width (W)
B	764
C	664

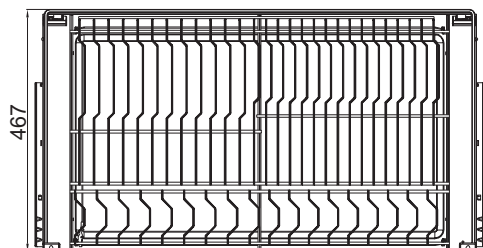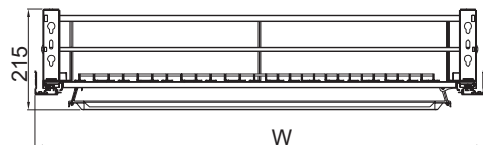

Cabinet requirements:

The inner width (W) in the table, height(H1)≥60, height(H2)≥300, inner depth≥470


Item	Inner Width(mm)
B	764
C	664

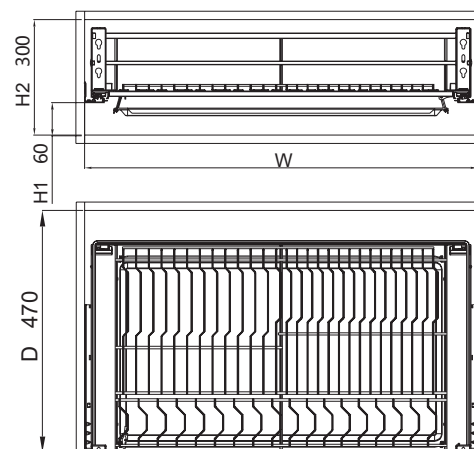

STEP 1 - Draw the marking line

Draw a marking and positioning line on the side cabinet, height ≥ 100 mm, depth ≥ 9 mm. Make the outer edge of the product basically parallel to the cabinet, as shown in Figure 1.


Try to keep the left and right positioning lines consistent.

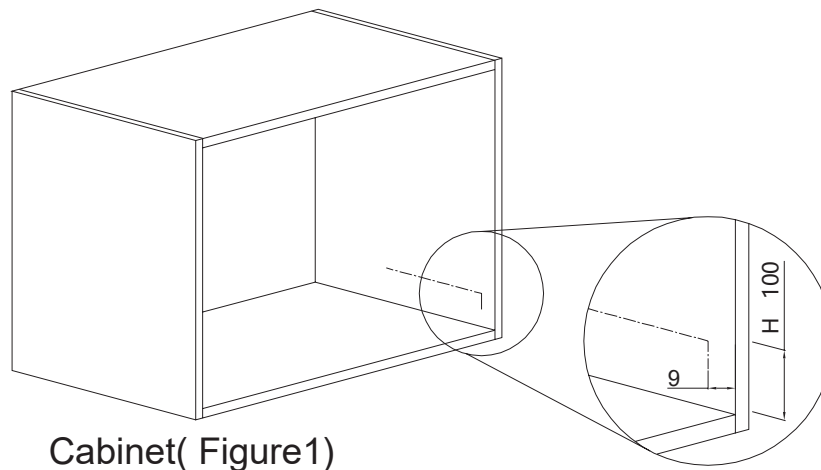

unit = mm


STEP 2 - Install the slide

Align the upper edge and outer edge of the slide (B) with the positioning line. Then, secure it in place using countersunk head tapping screws (J), as shown in Figure 2.

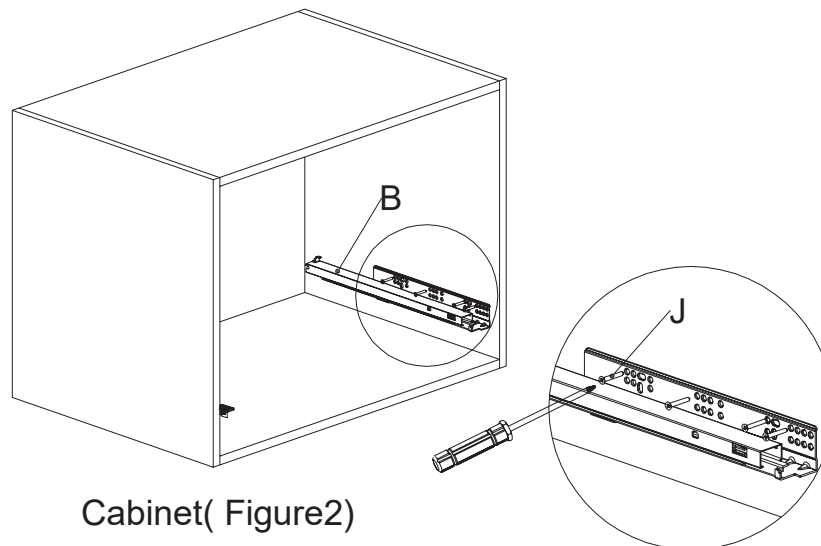


STEP 3 - Install the basket

Pull out the slide to make the left and right slide covers of the basket (A) fit the slide and push it inward. After hearing the "click" sound, it means that the quick release part is stuck on the slide, as shown in Figure 1.

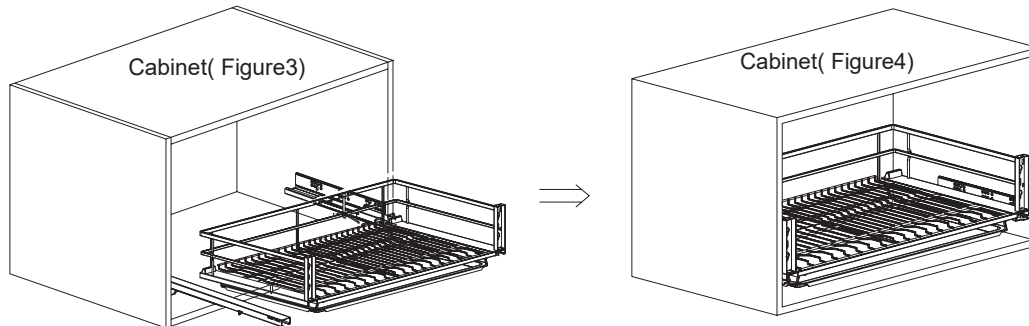

Draw the door panel positioning line (for three side basket)

Draw the positioning line according to Figure 5, align the door panel mounting part (C) with the positioning line, and fix it with ST4X16 cross countersunk self-tapping screw (J).

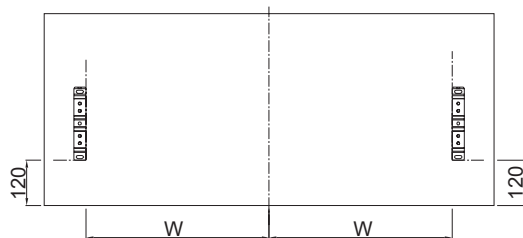

Door panel(Figure5)

Item	Positioning Inner Width(mm)
B	340
C	290

Door panel installation (for three side basket)

1. As shown in Figure 7, adjust the screws (1) and (3) to the proper position.
2. As shown in Figure 6 and Figure 8, hang the door panel connector (C) on the connector seat of the basket (A) and fix it with screws (1) (3).

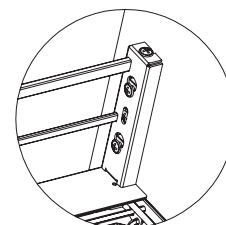
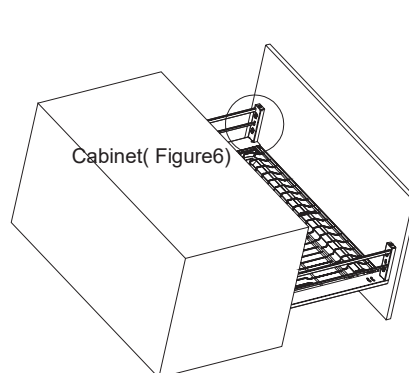


Figure 8


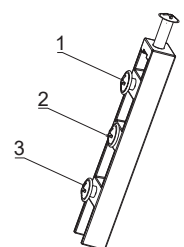


Figure 7

Complete installation

1. As shown in Figures 9, 10 and 11, install the dishes rack backrest (E) on the main frame and fix it with backrest left and right clip (H) and backrest middle clip (I).
2. As shown in Figure 9, put the plastic cup holder (F) and the plastic hanging chopstick box (G) on the main frame.
3. As shown in Figure 9, place the water tray (D) on the main frame.

Note: Steps 1 and 2 apply only for three side dishes basket and four side dishes basket.

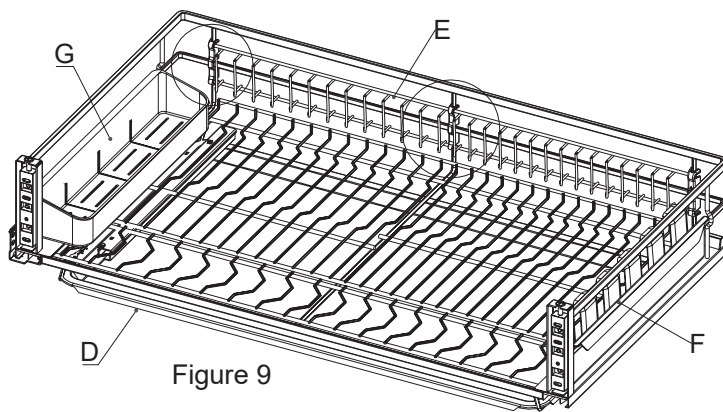

H Figure 10

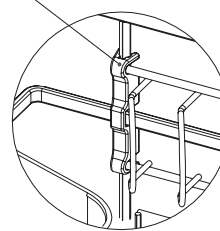


Figure 11

